



Installation steps


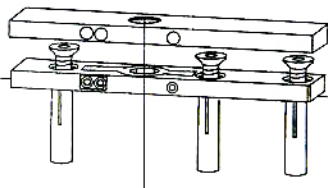


1 To determine the spring installation location, level and verticality of guarantee, according to the scene in the correct installation accessories spring base, after the completion of installation surface cover.


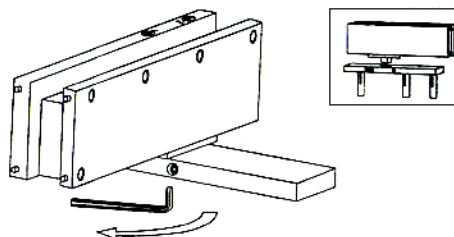


2 The main card into the base fixed good, base para screw loosen, leveraging the movable spanner or other tools will move into the spring of 90 degrees.

Glass hole figure

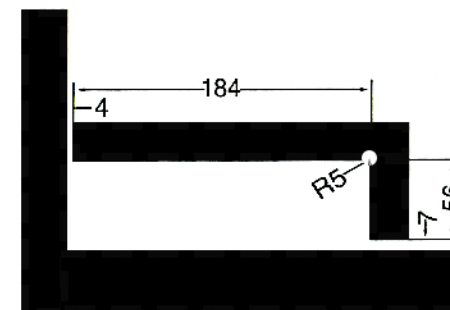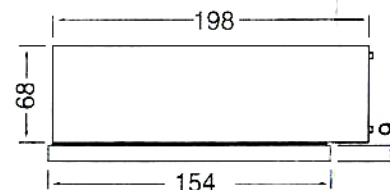


Speed guidance

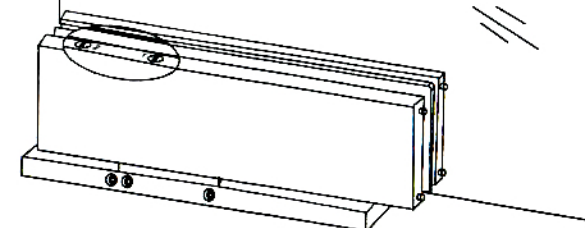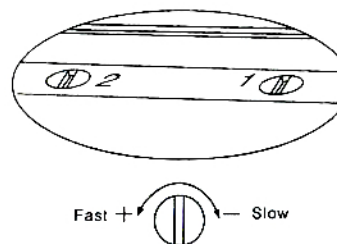


- 1 No. 1 and No. 2 valve lock.
- 2 The No. 1 and No. 2 valves are open 4/4 weeks.
- 3 Regulation No. 1 in order to achieve the ideal valve closing speed.
- 4 Regulating valve number 2 in order to achieve the desired locking velocity.
- 5 Recommended for each valve adjusting amplitude less than 1/4 weeks.


Before installation, pay attention to:
Do not put speed screw loose out completely, in order to maintain the utility of the product function and the maintenance of the original factory

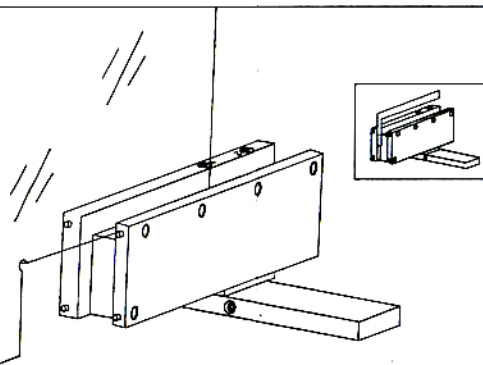


3 With clamp and a top shaft, in regulating valve in the proper direction of non asbestos gasket, the glass is pushed into the body

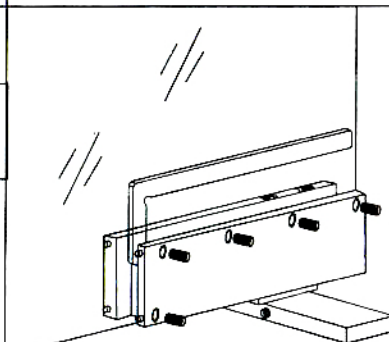

4 Non asbestos gasket with the third step into the same number of after loading a aluminum gasket, then lock the five screws.

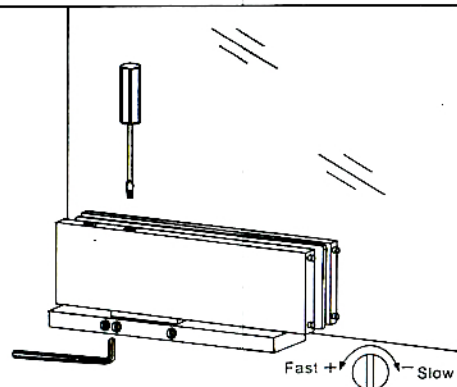

5 test the closed, tighten and adjust the base alignment screws, to correct the verticality adjusting valve speed for use with need, please refer to "guidance" speed

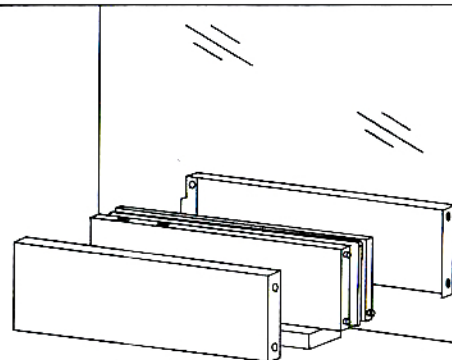

6 Installation of cover version and install and use.