

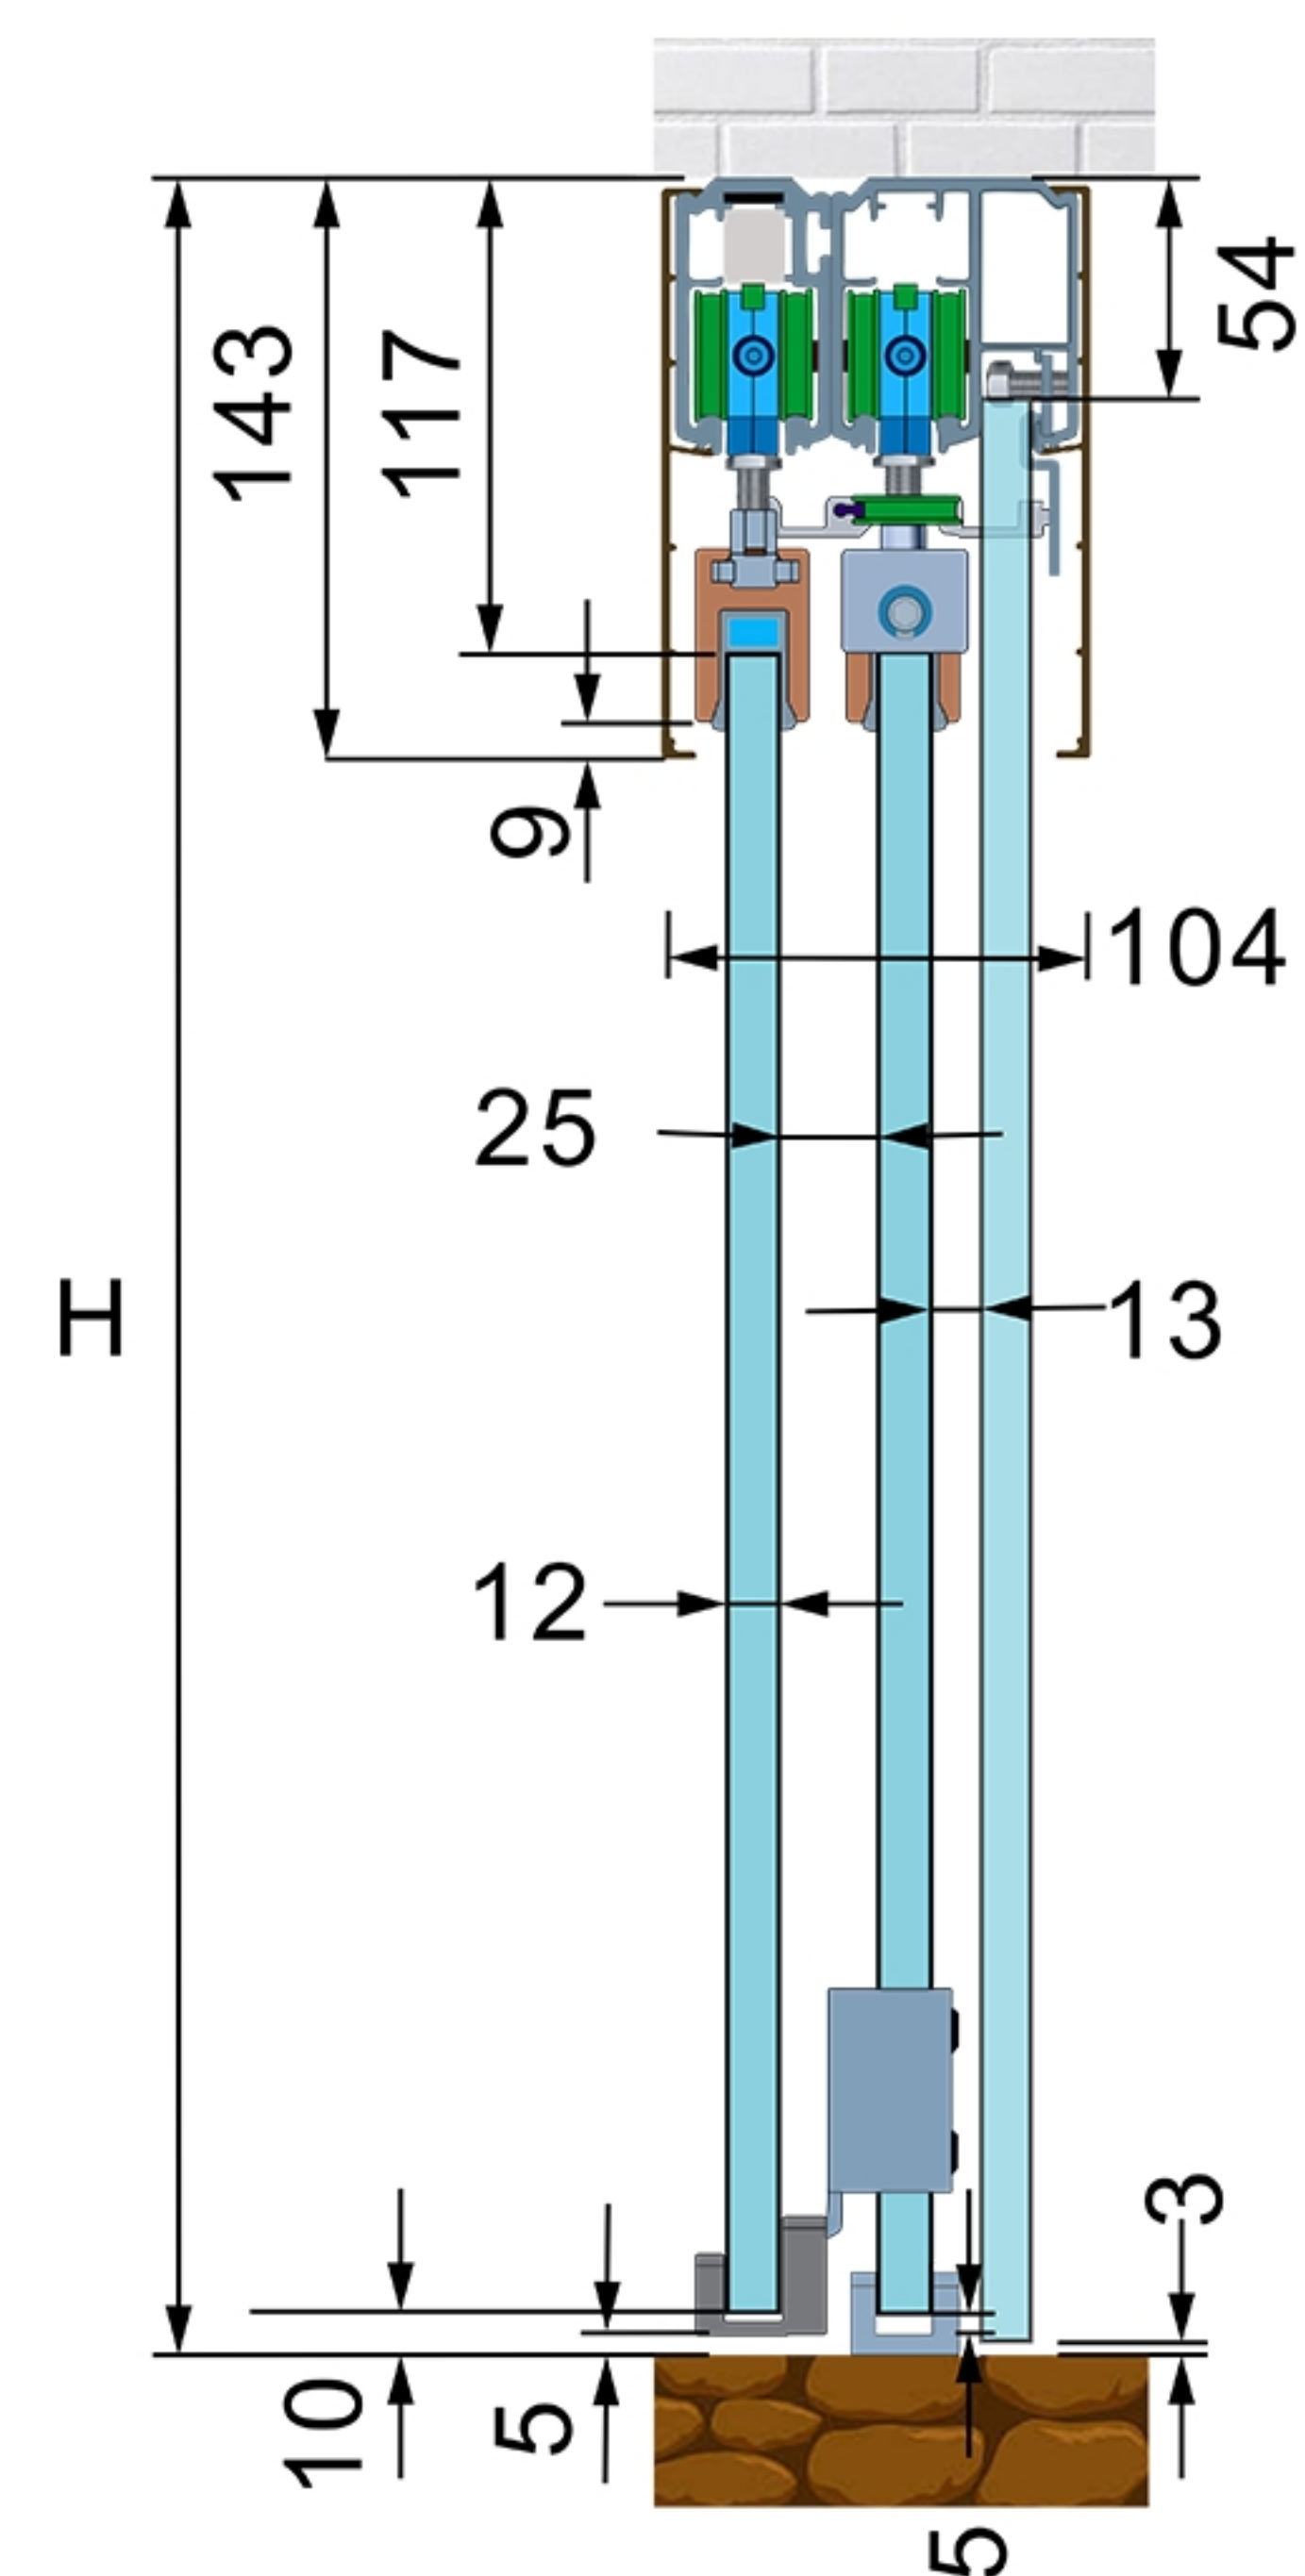



3 Panels Telescoping Door Kits

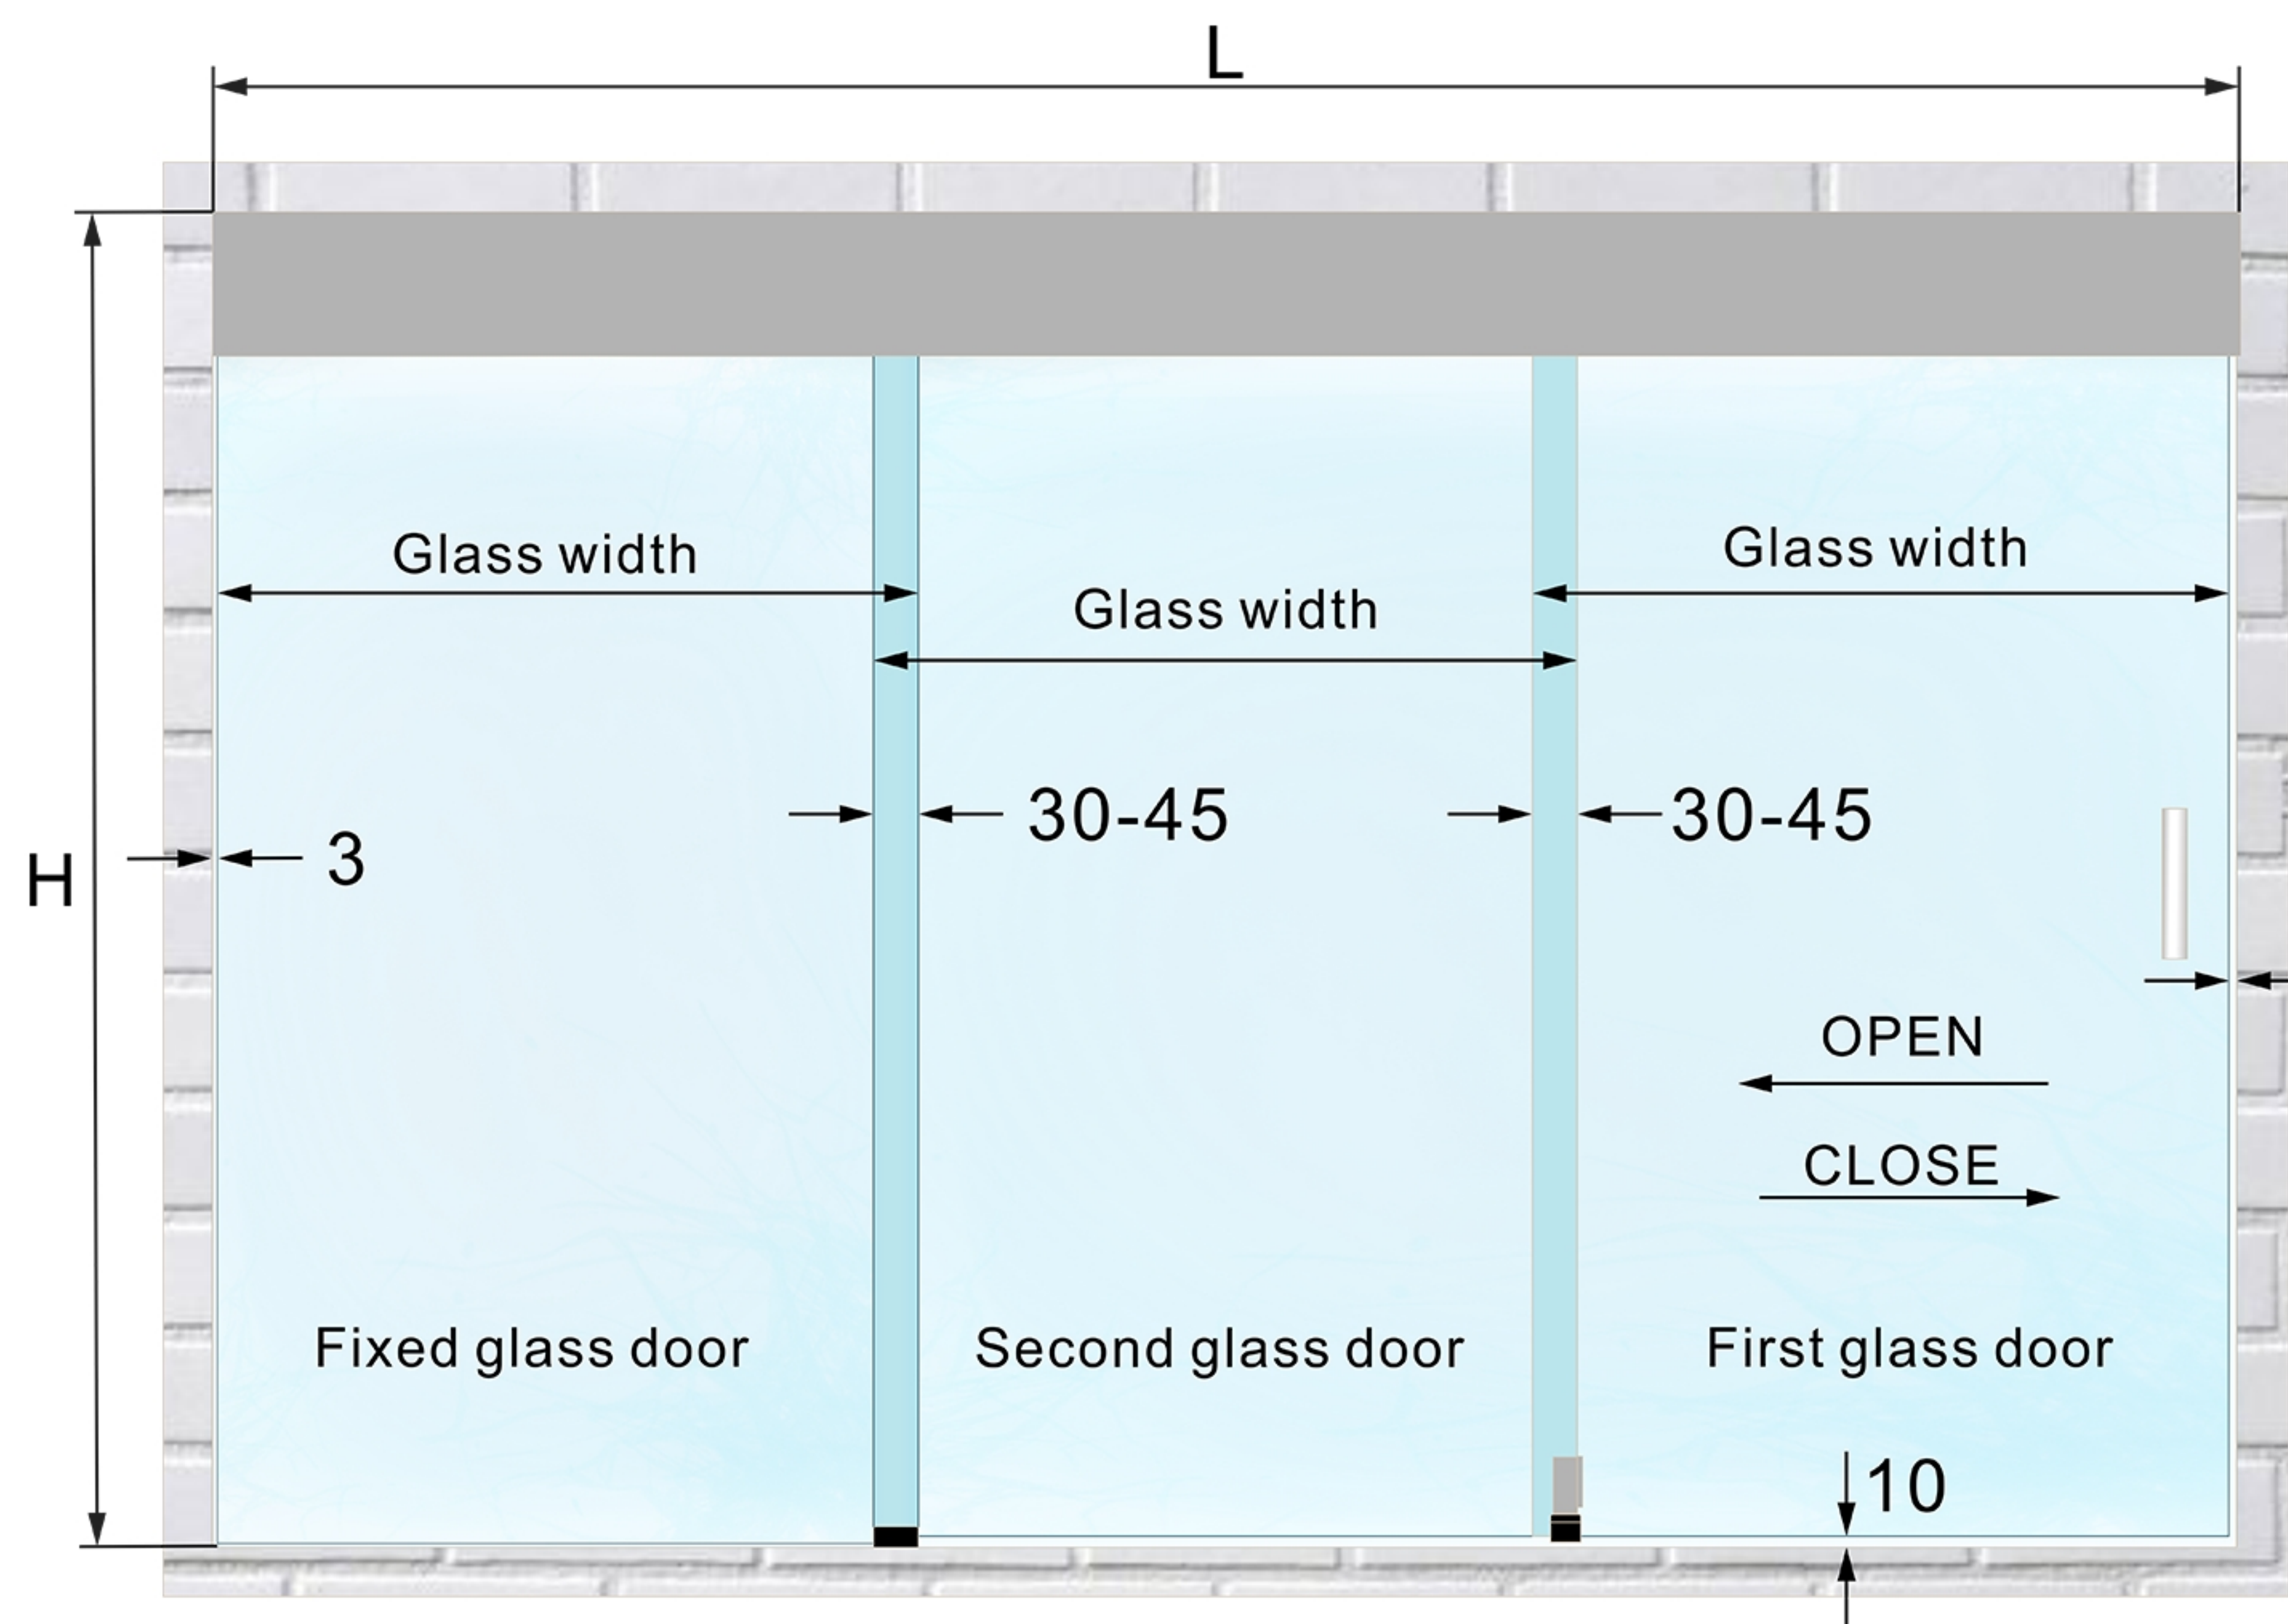


glass width= $(L+45+45-3-5) / 3$
fixed glass height= $H-57$
movable glass height= $H-127$
Steel wire length = $(W \times 2)+200$
movable glass can be up for 6mm and down for 4mm

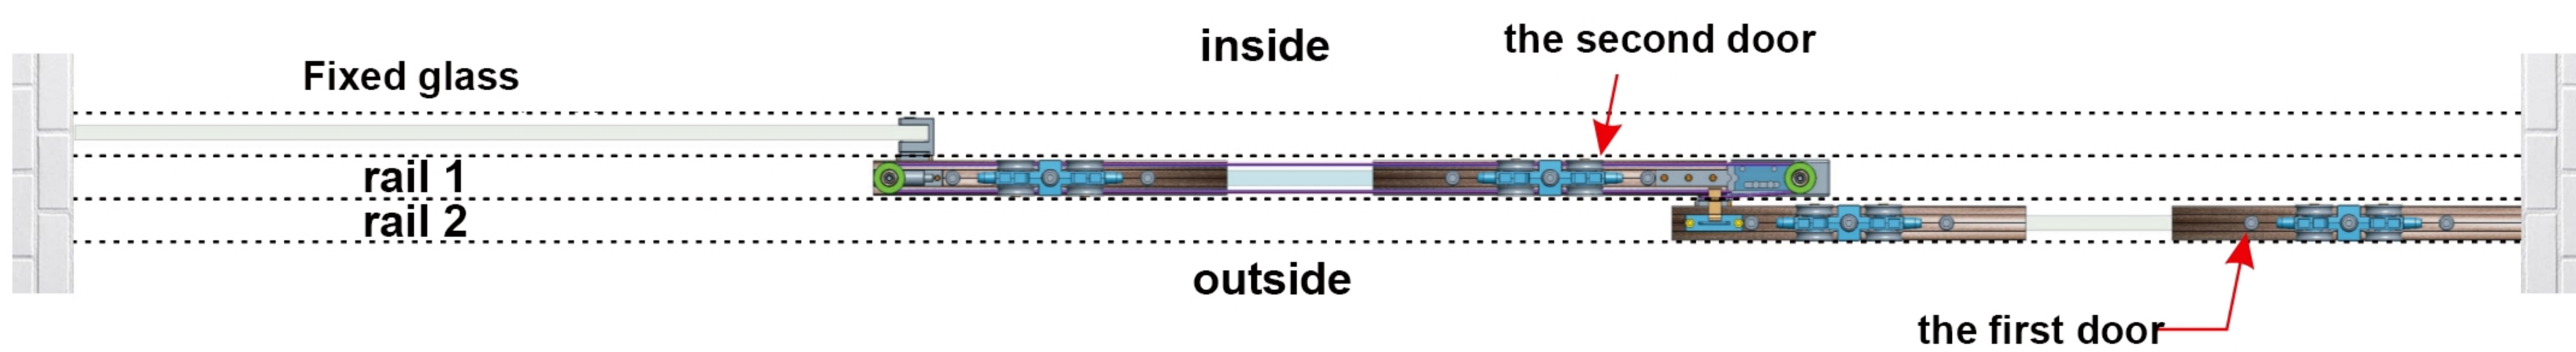

Accessories

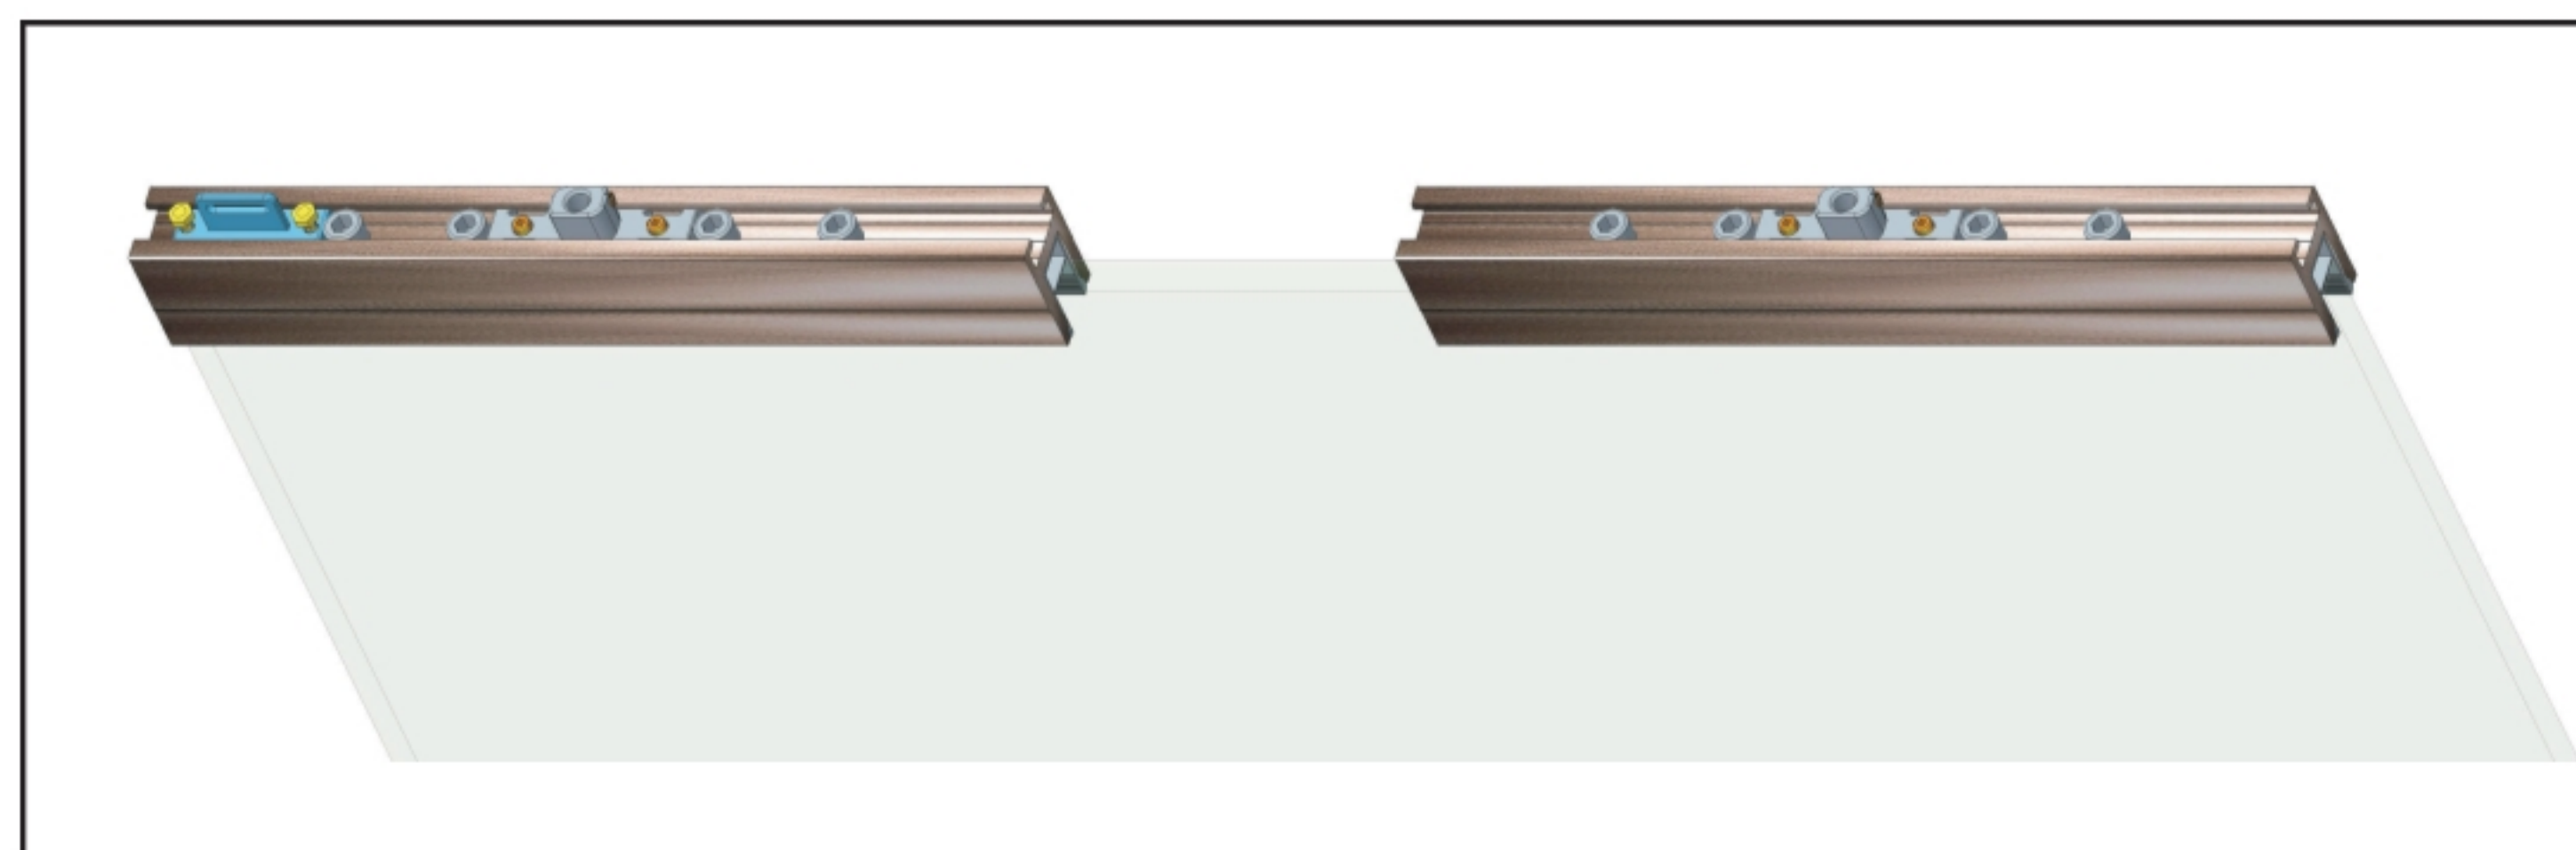


glass clamp for the first door

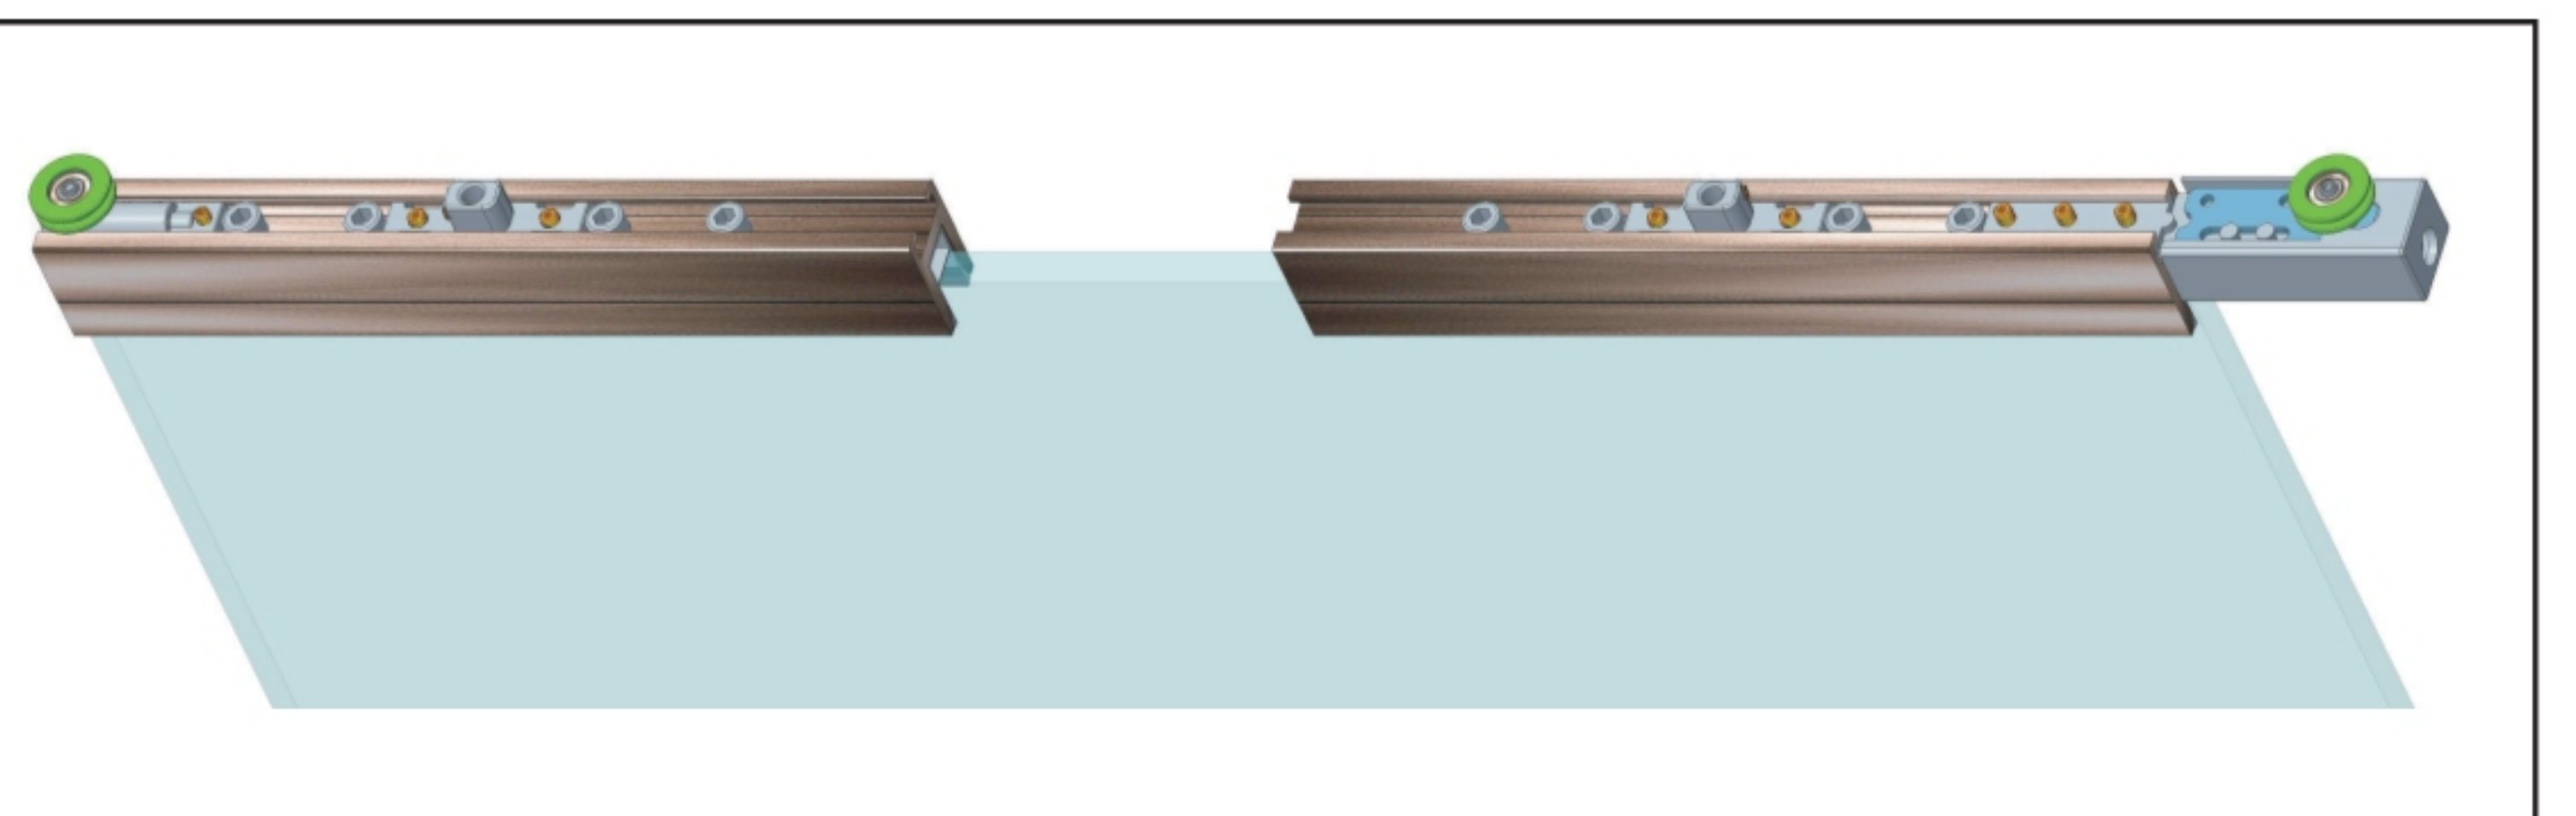


glass clamp for the second door

INSTALLATION


1.Place the component into rail according to the order and direction, then install the rail.

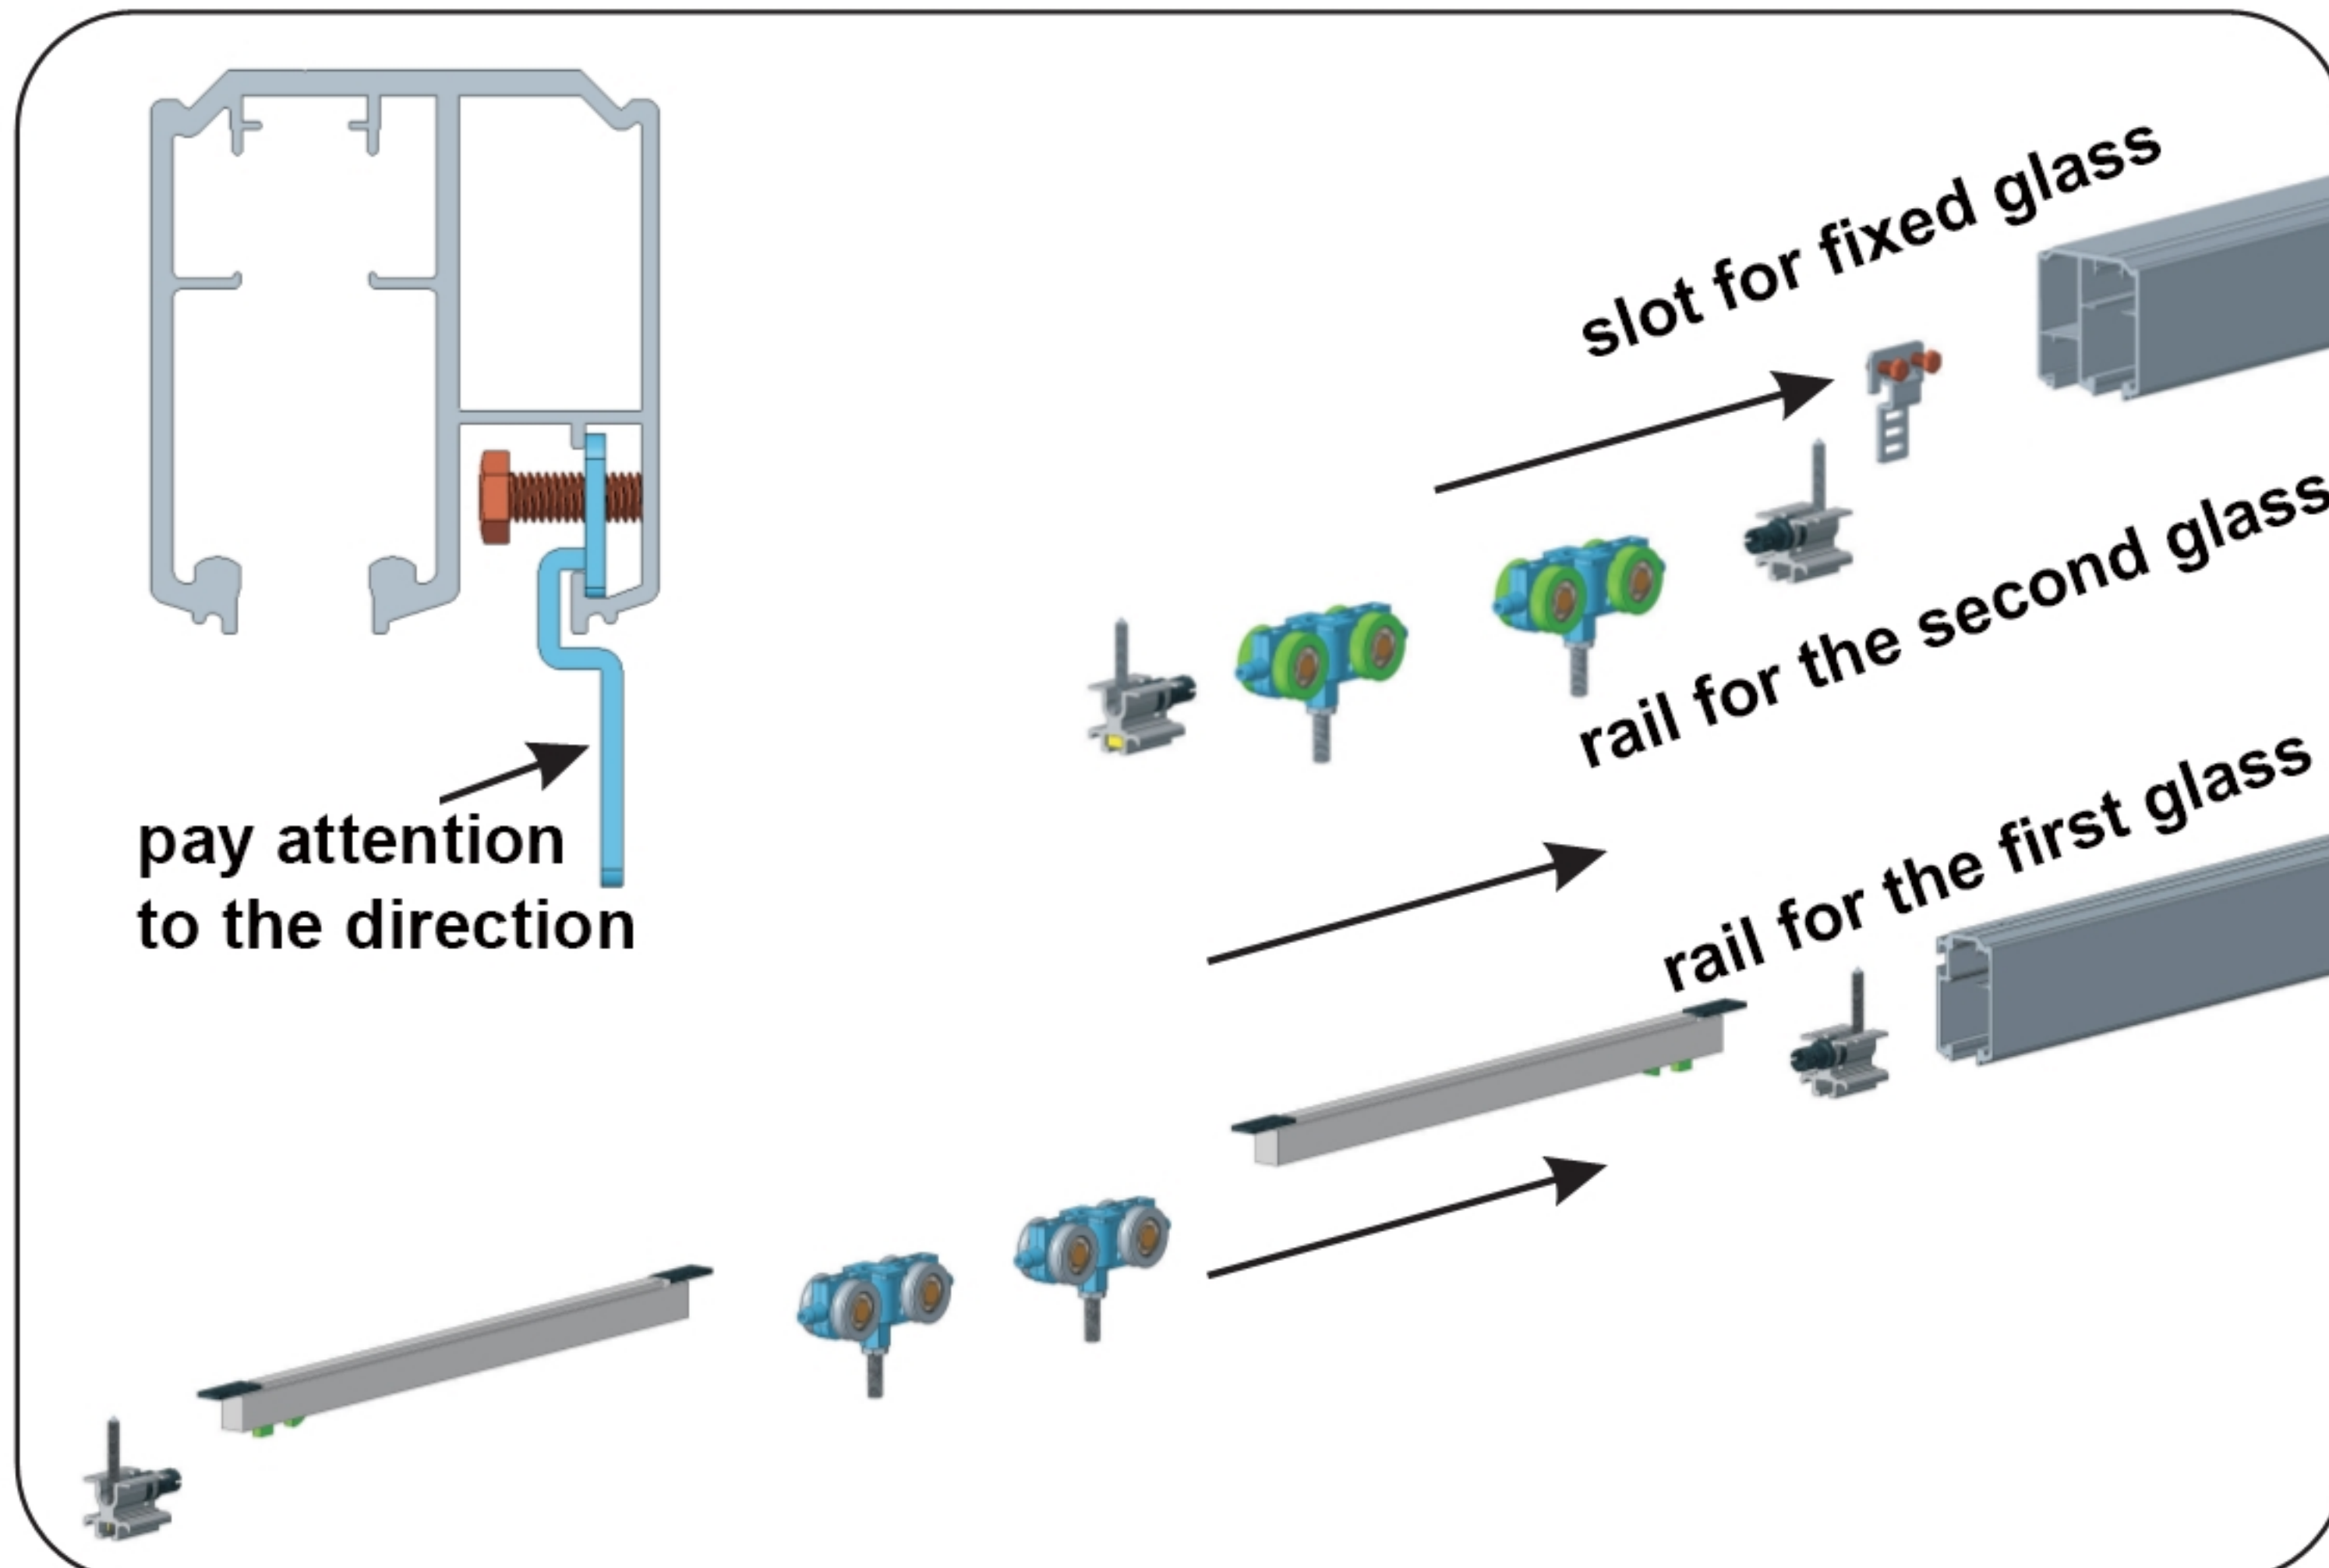


2.Fix the hydraulic damper and stopper on the left and right sides of the rail, as picture

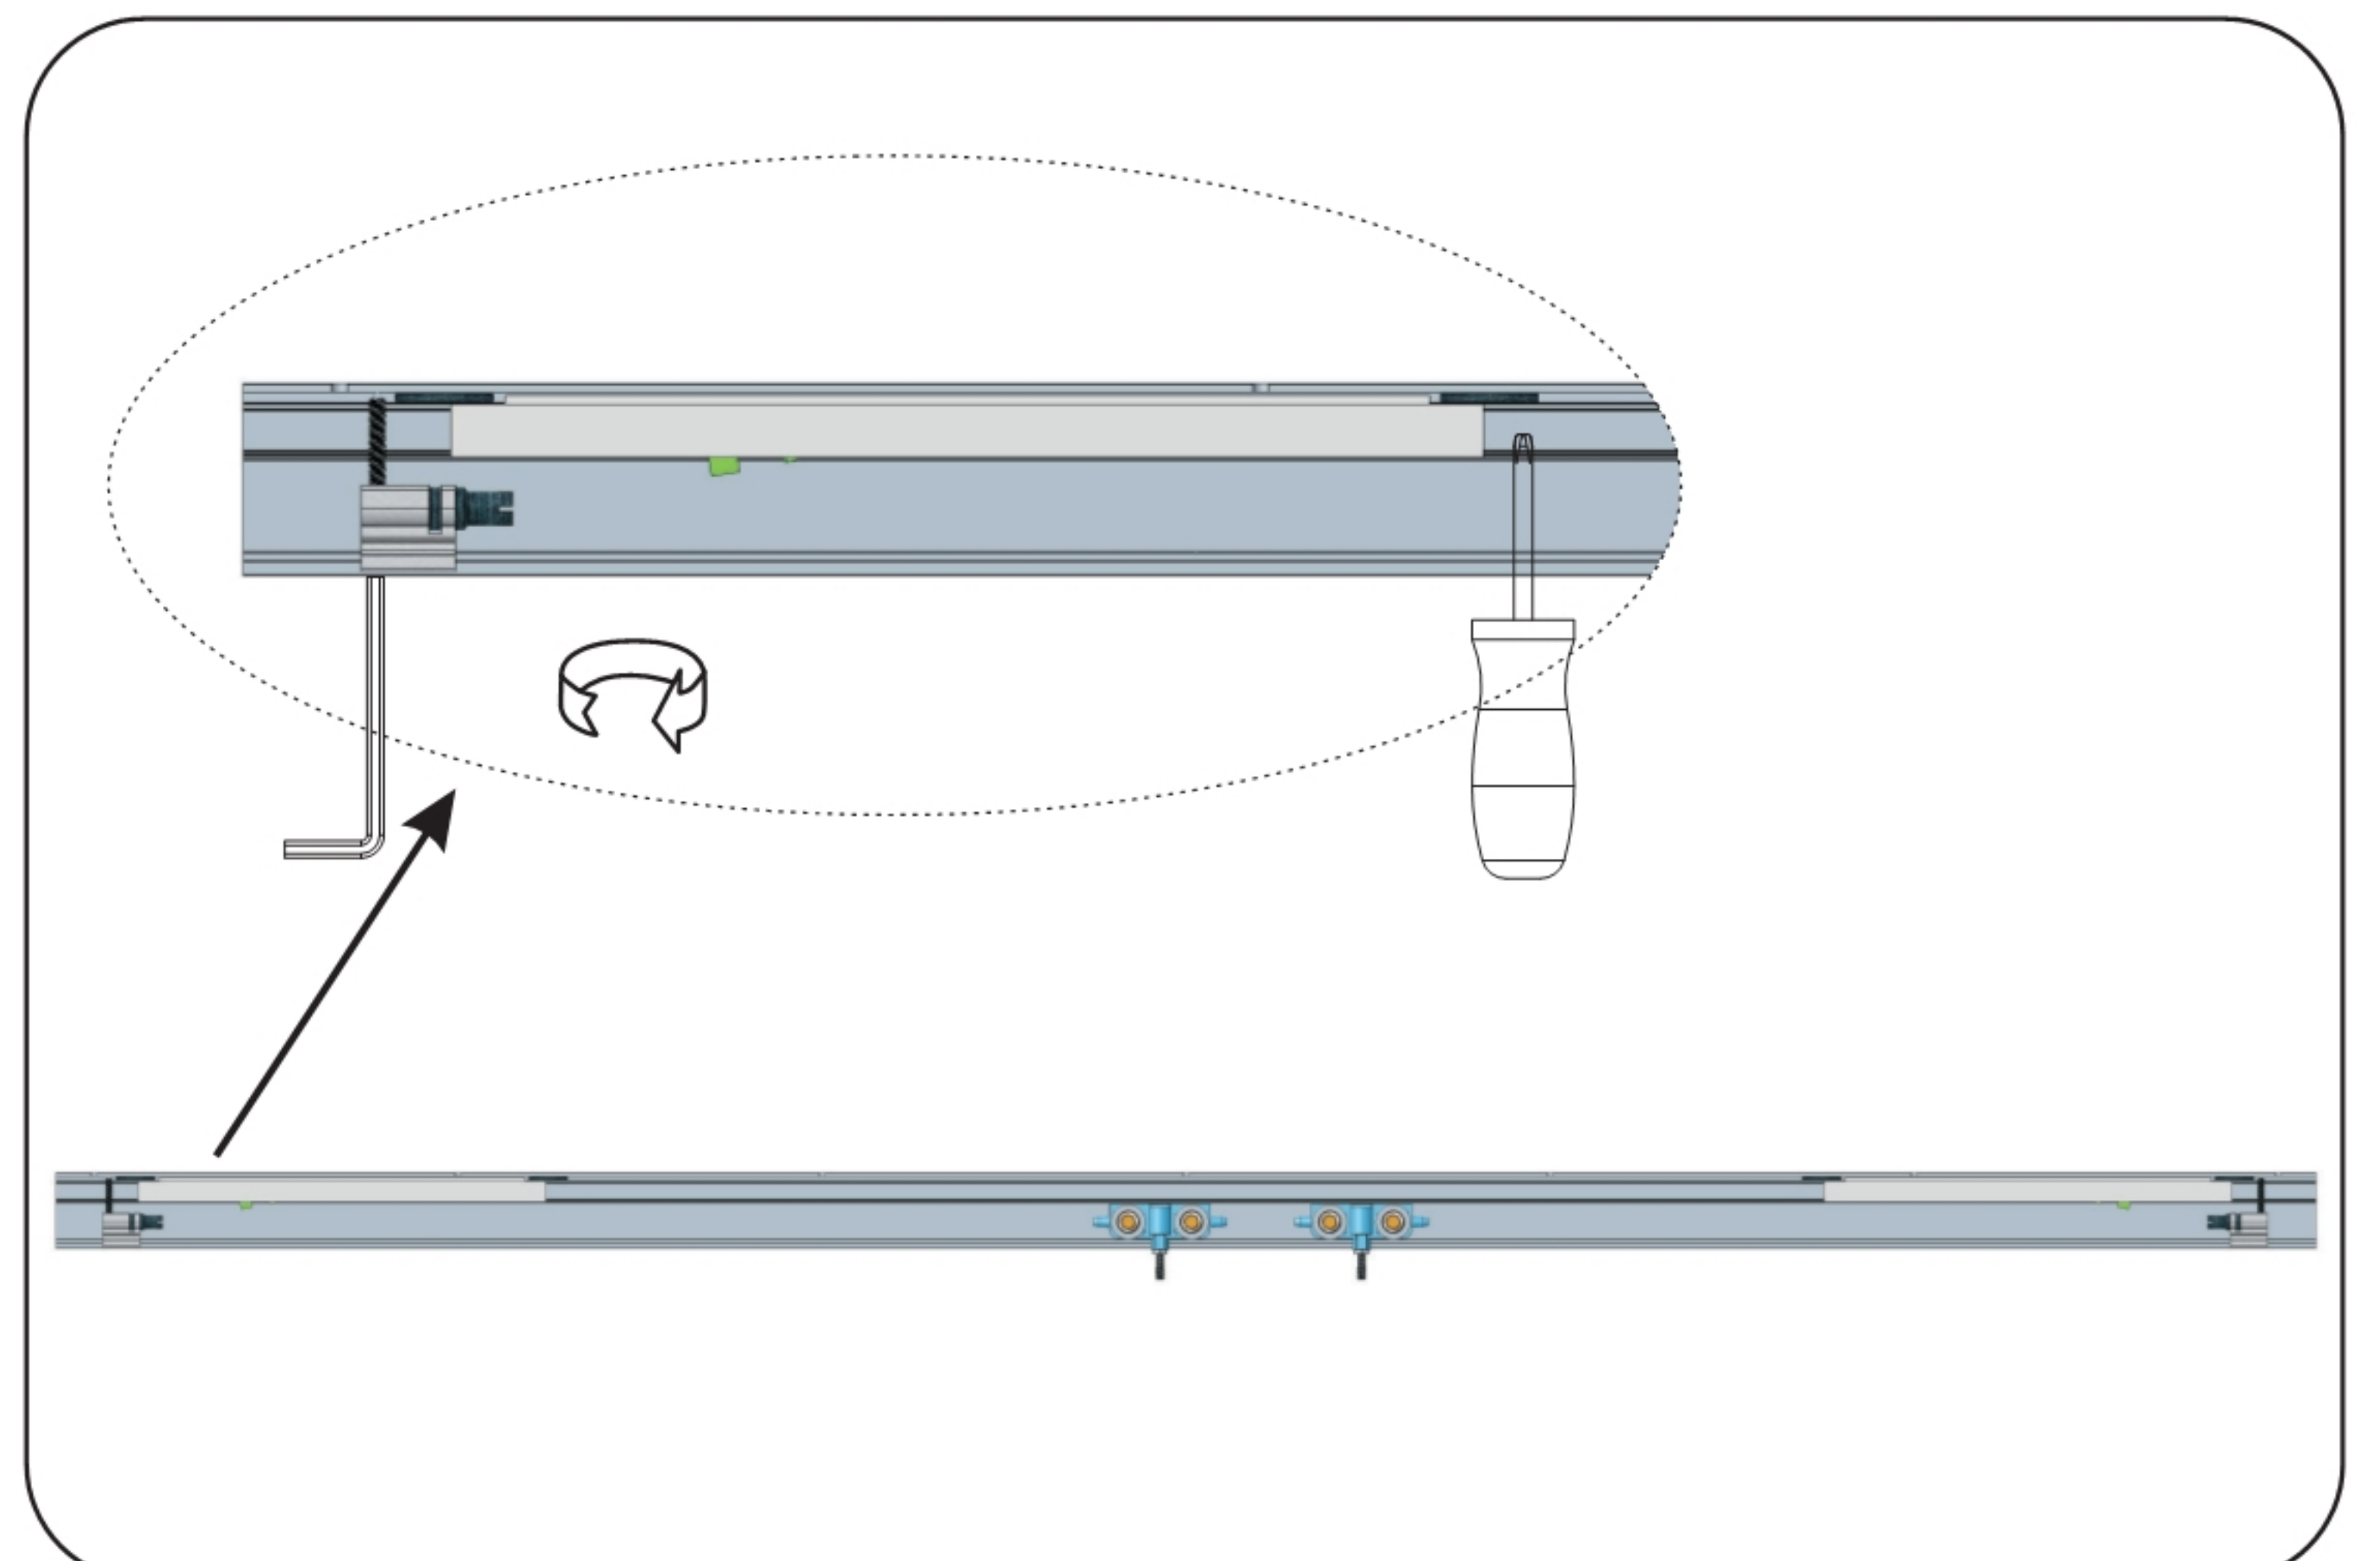


3.Tightening glass, tighten the first glass, picture as below

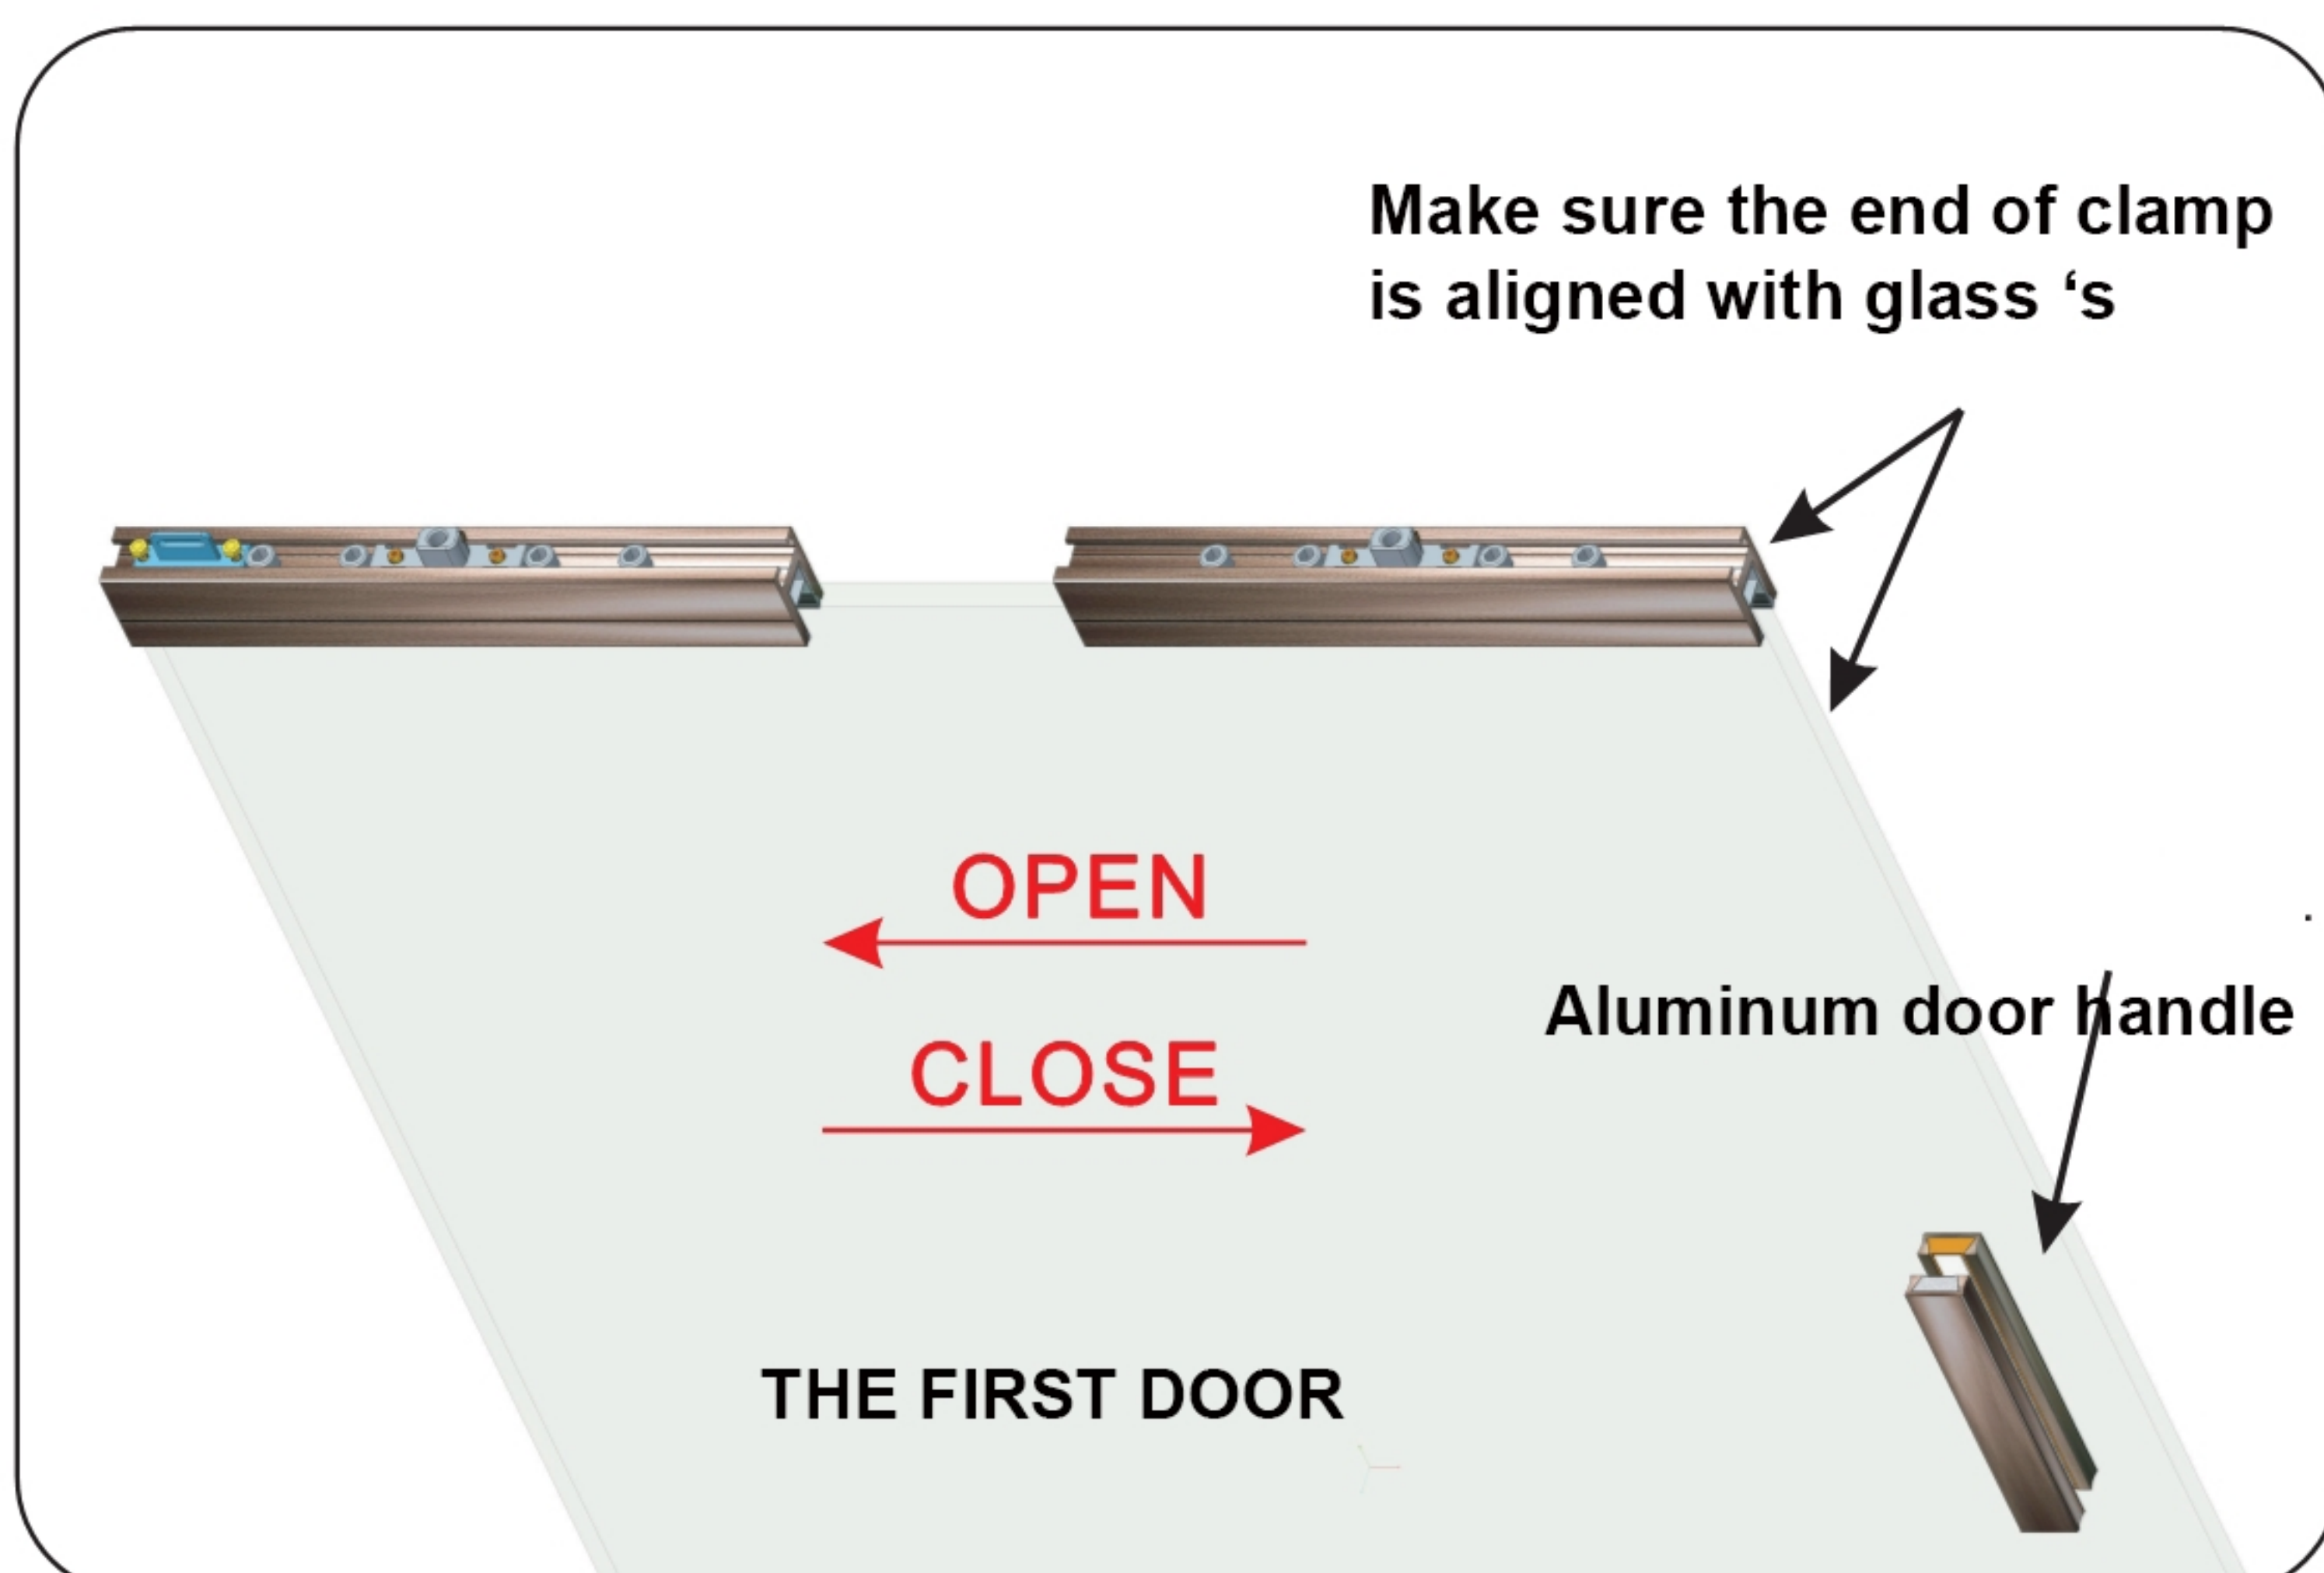


4.Tighten the second glass, picture as below (didn't hang)

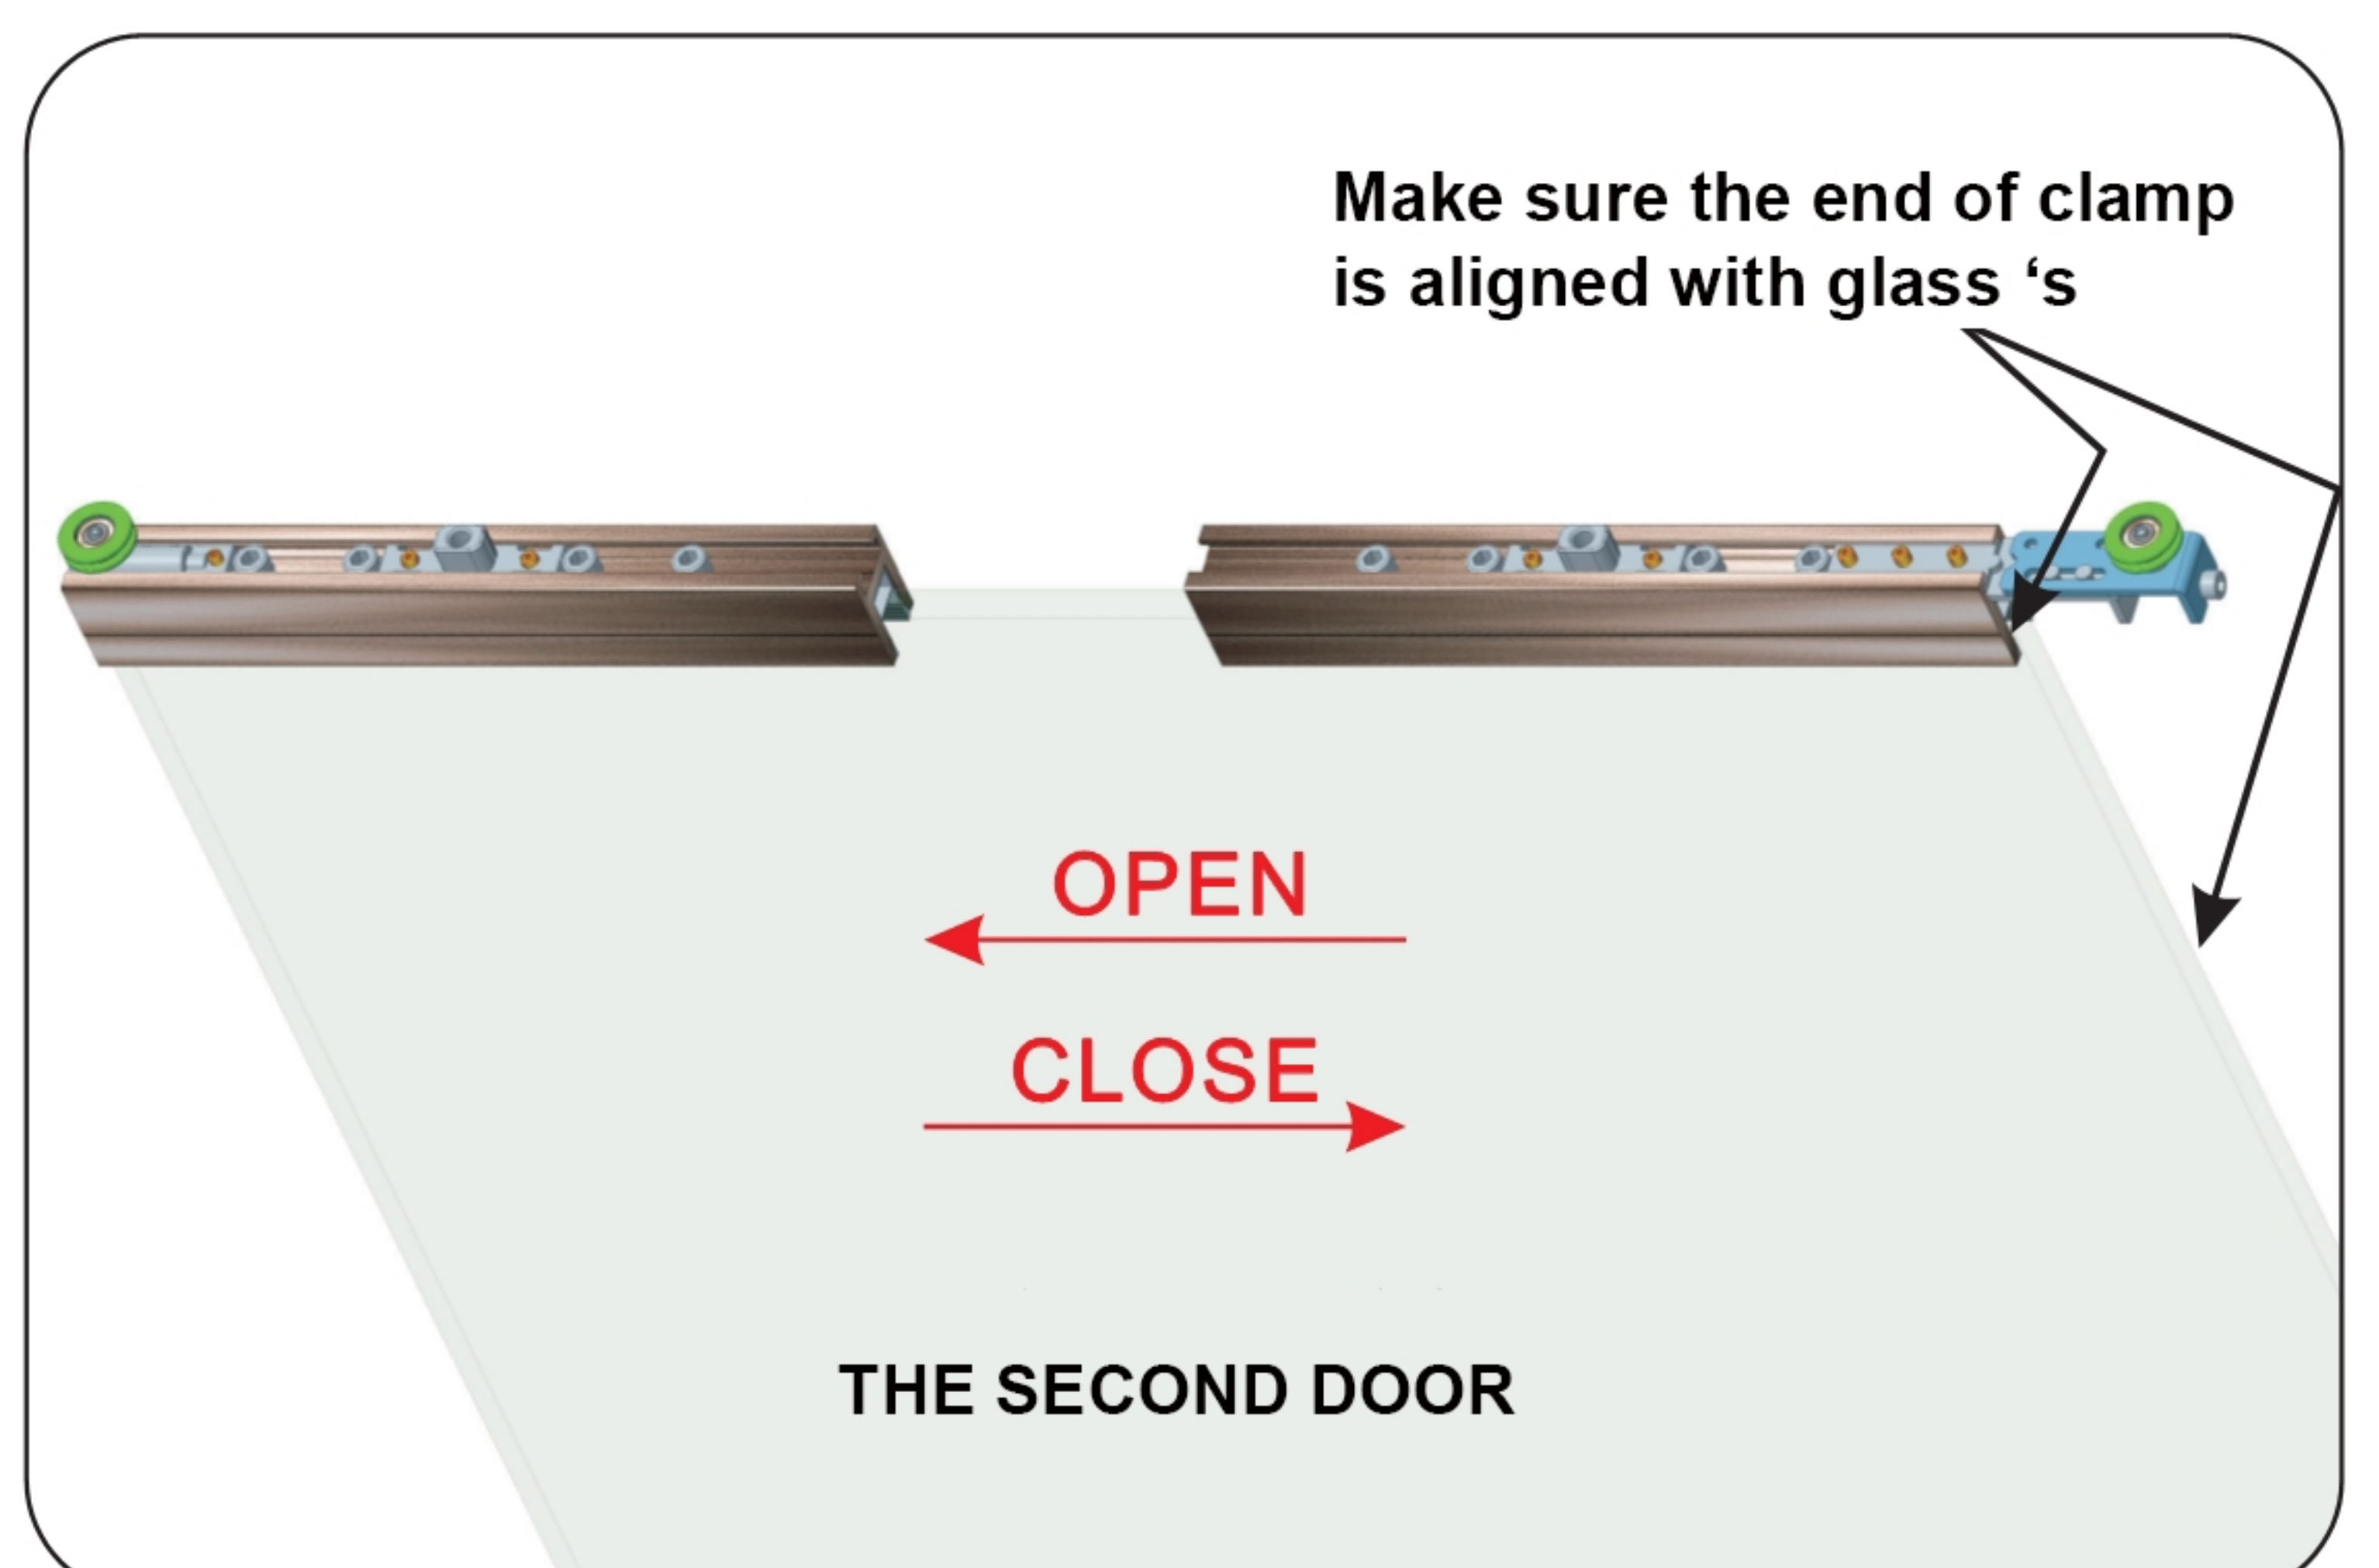


5.hreading the wire rope

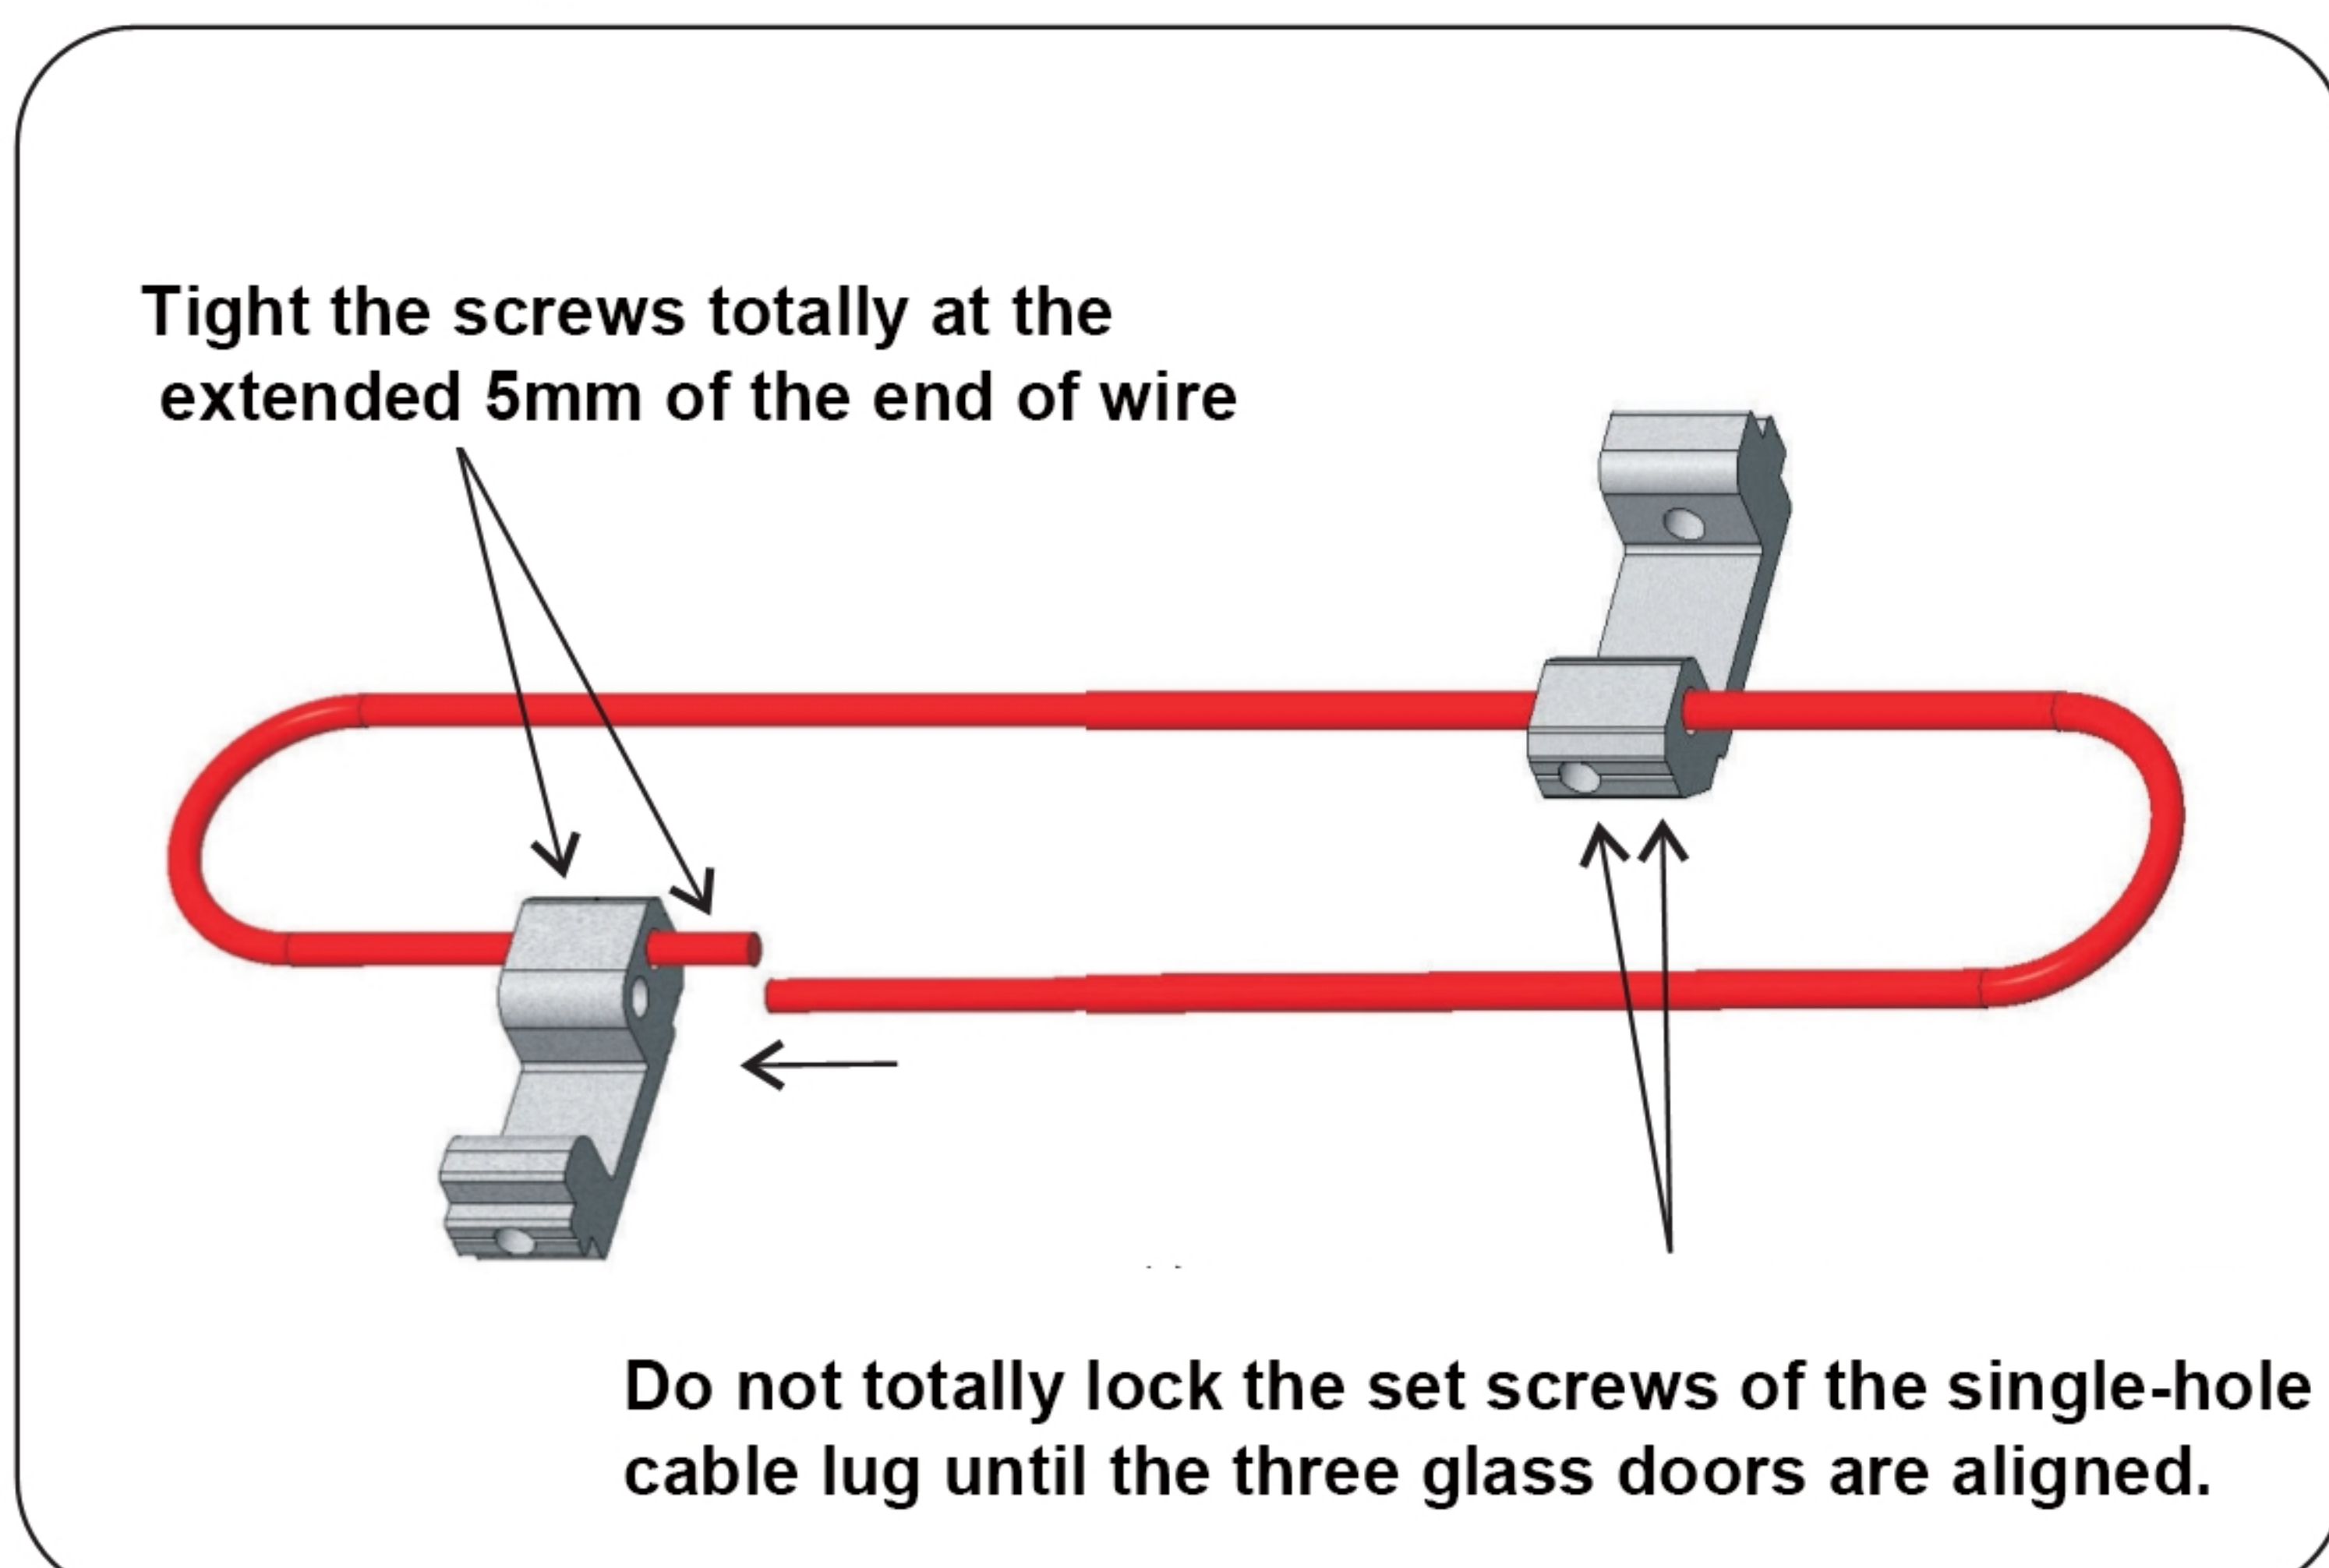


6.Insert the wire trap into the transfer wheel of the second glass. Pay attention to the direction and then tighten the wire fixed screw of the double hole wire lug.

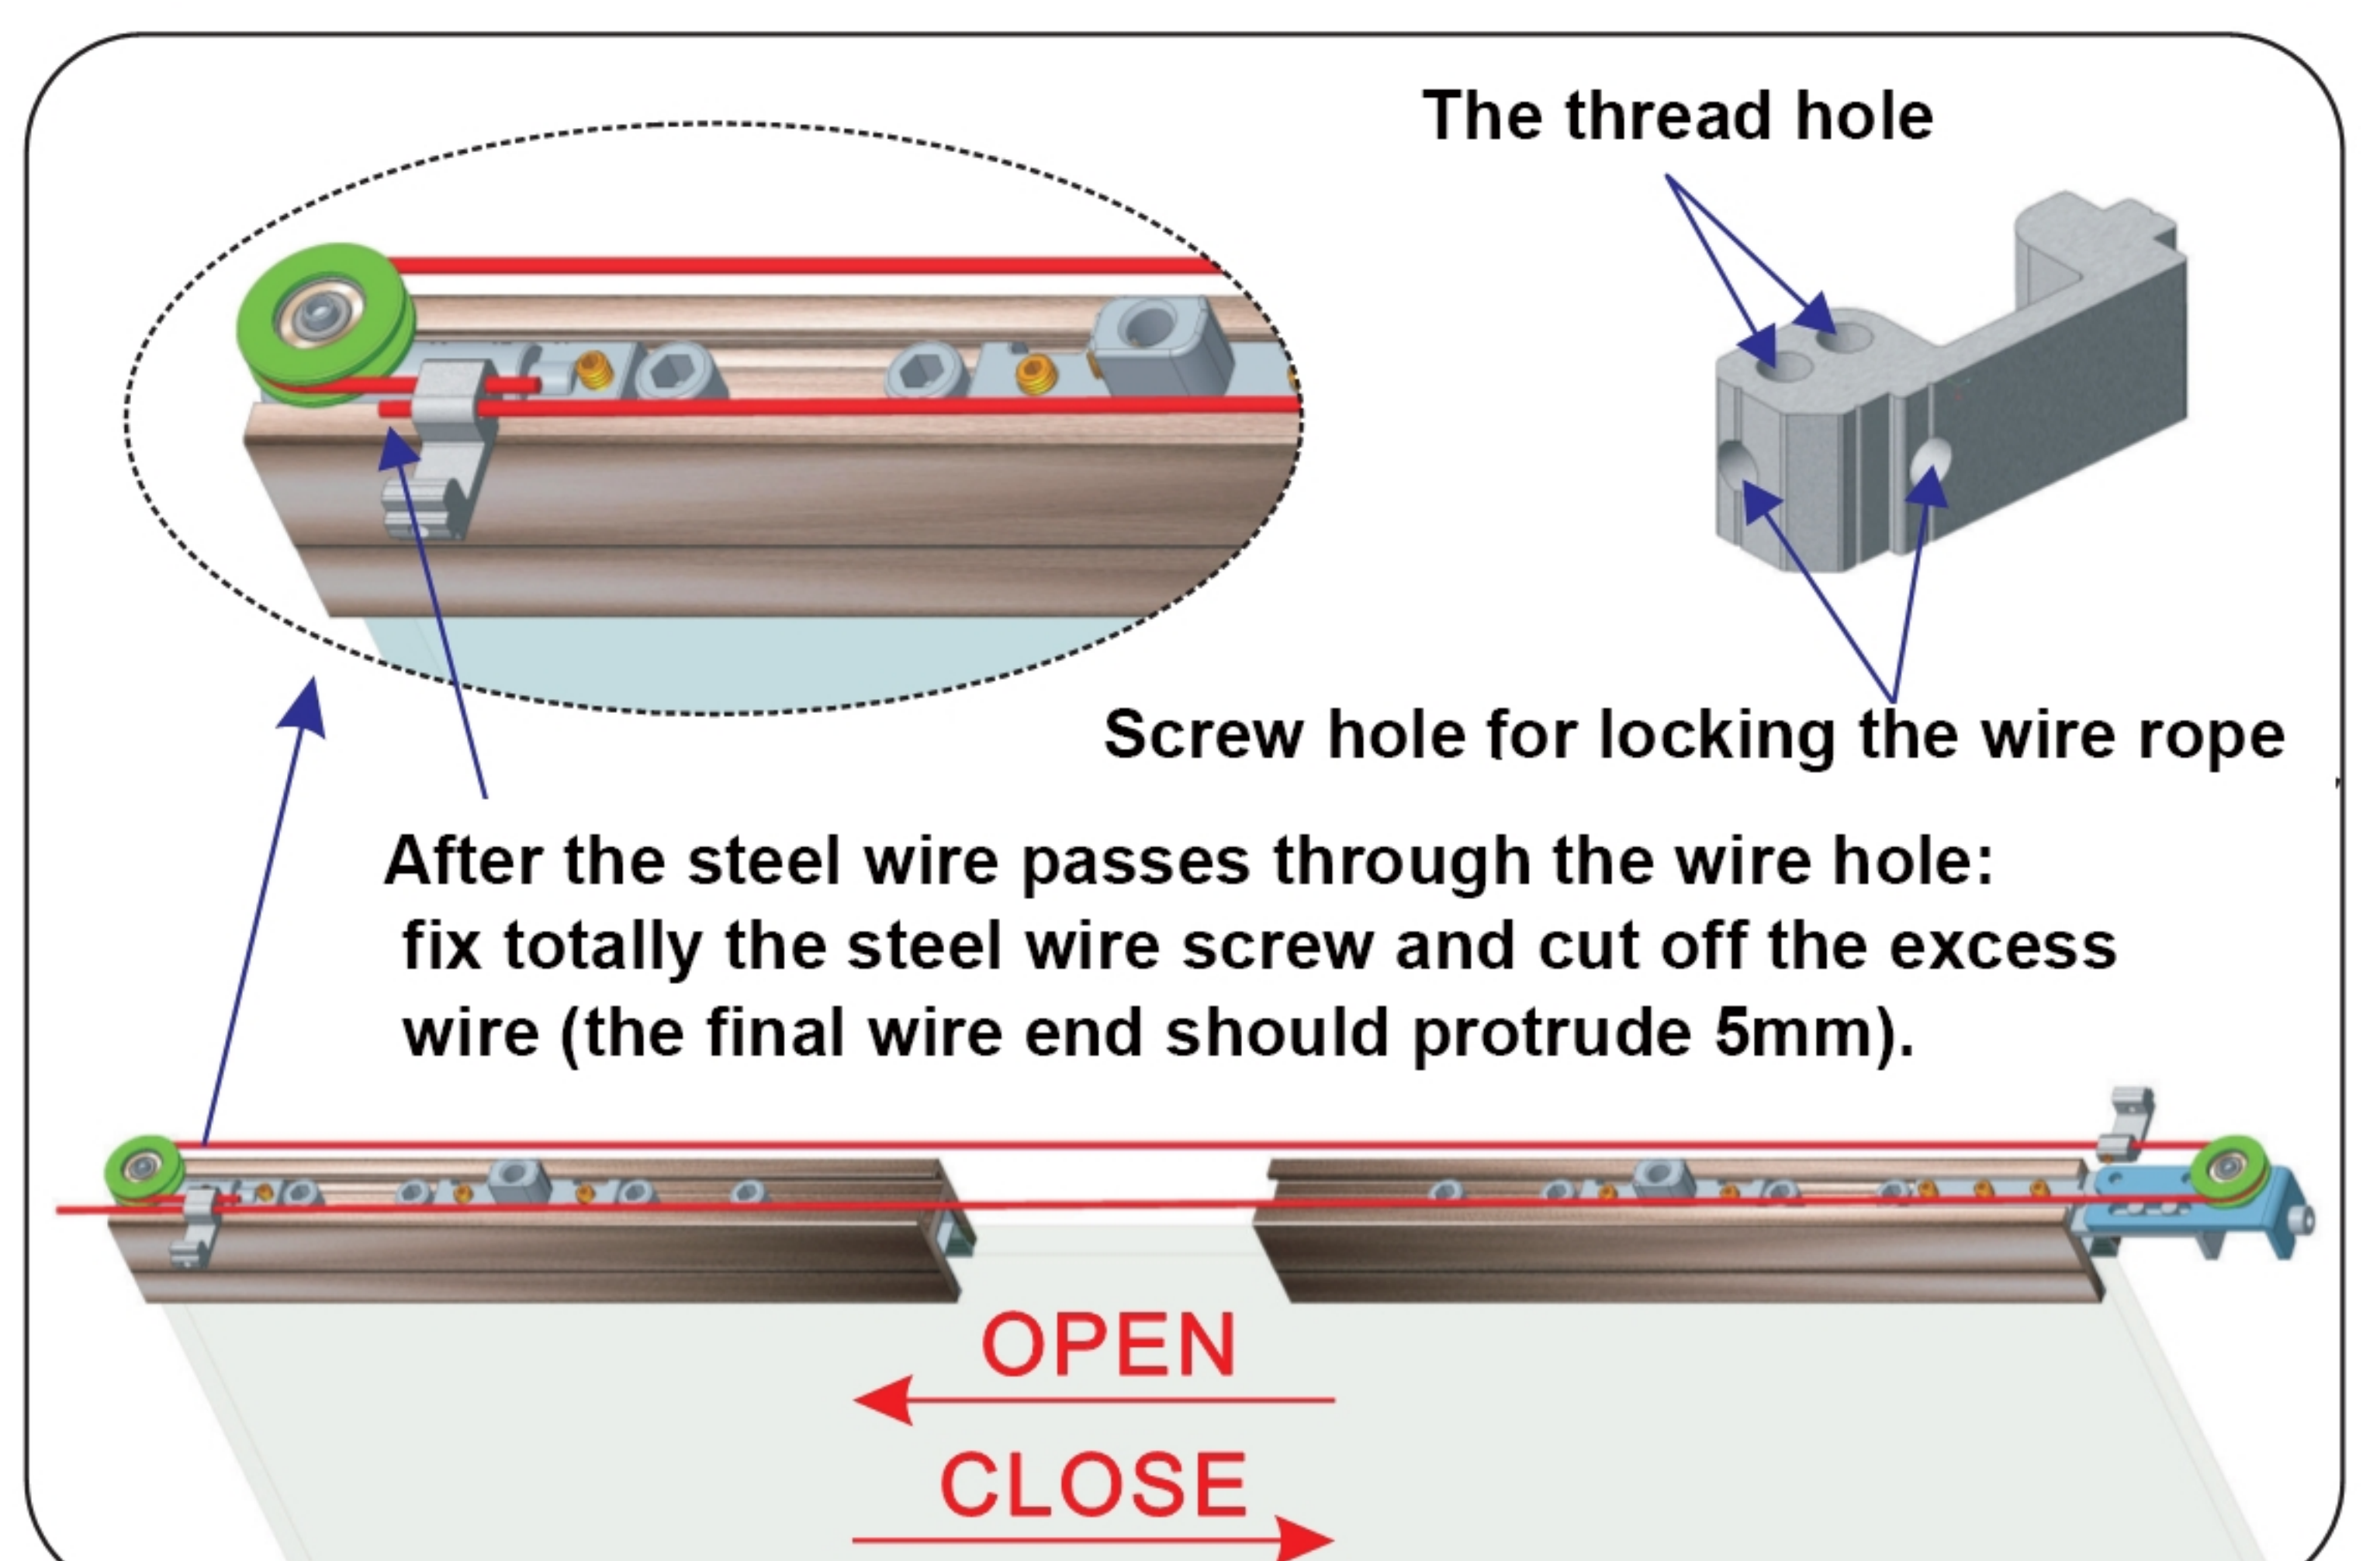


7.Lift the 1st&2nd glass, careful for the direction of the glass clamp

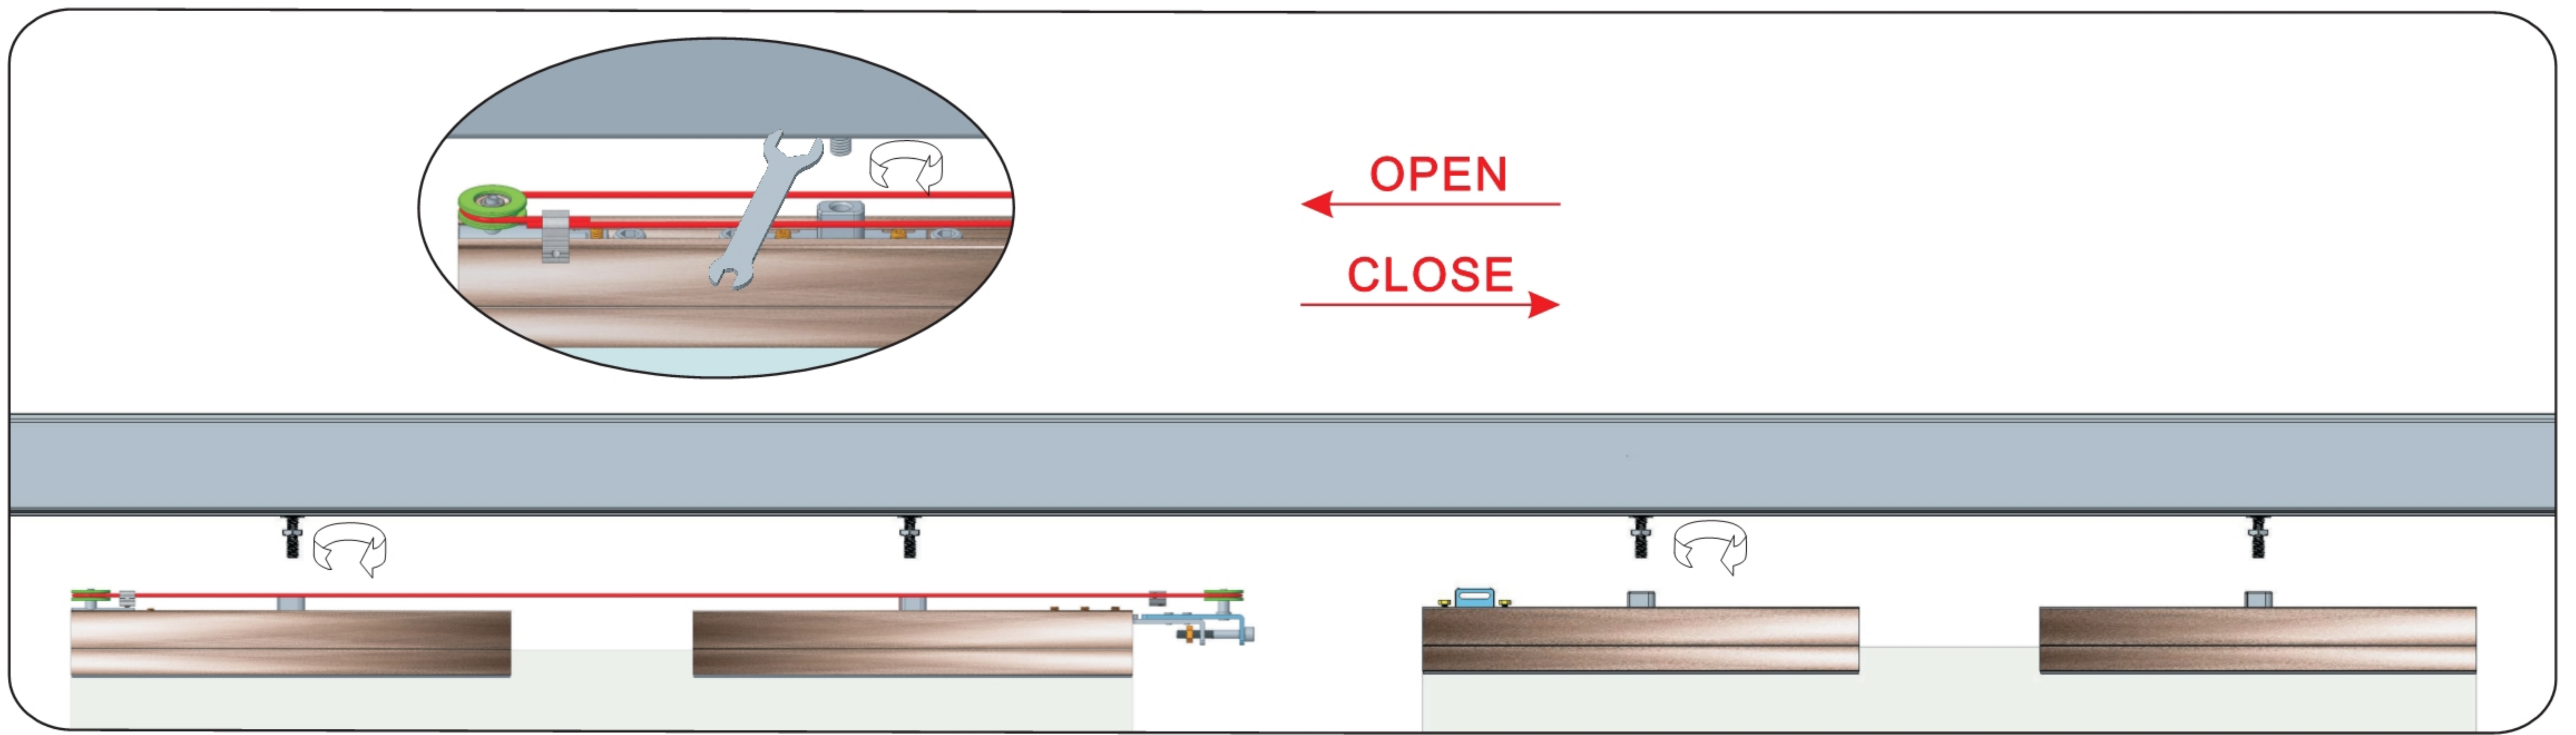


8.Insert the fixed glass, adjust the distance and pendency between the wall, move the wire cable lug fixing seat to the fixed glass (as close as possible), and fix it with spanner

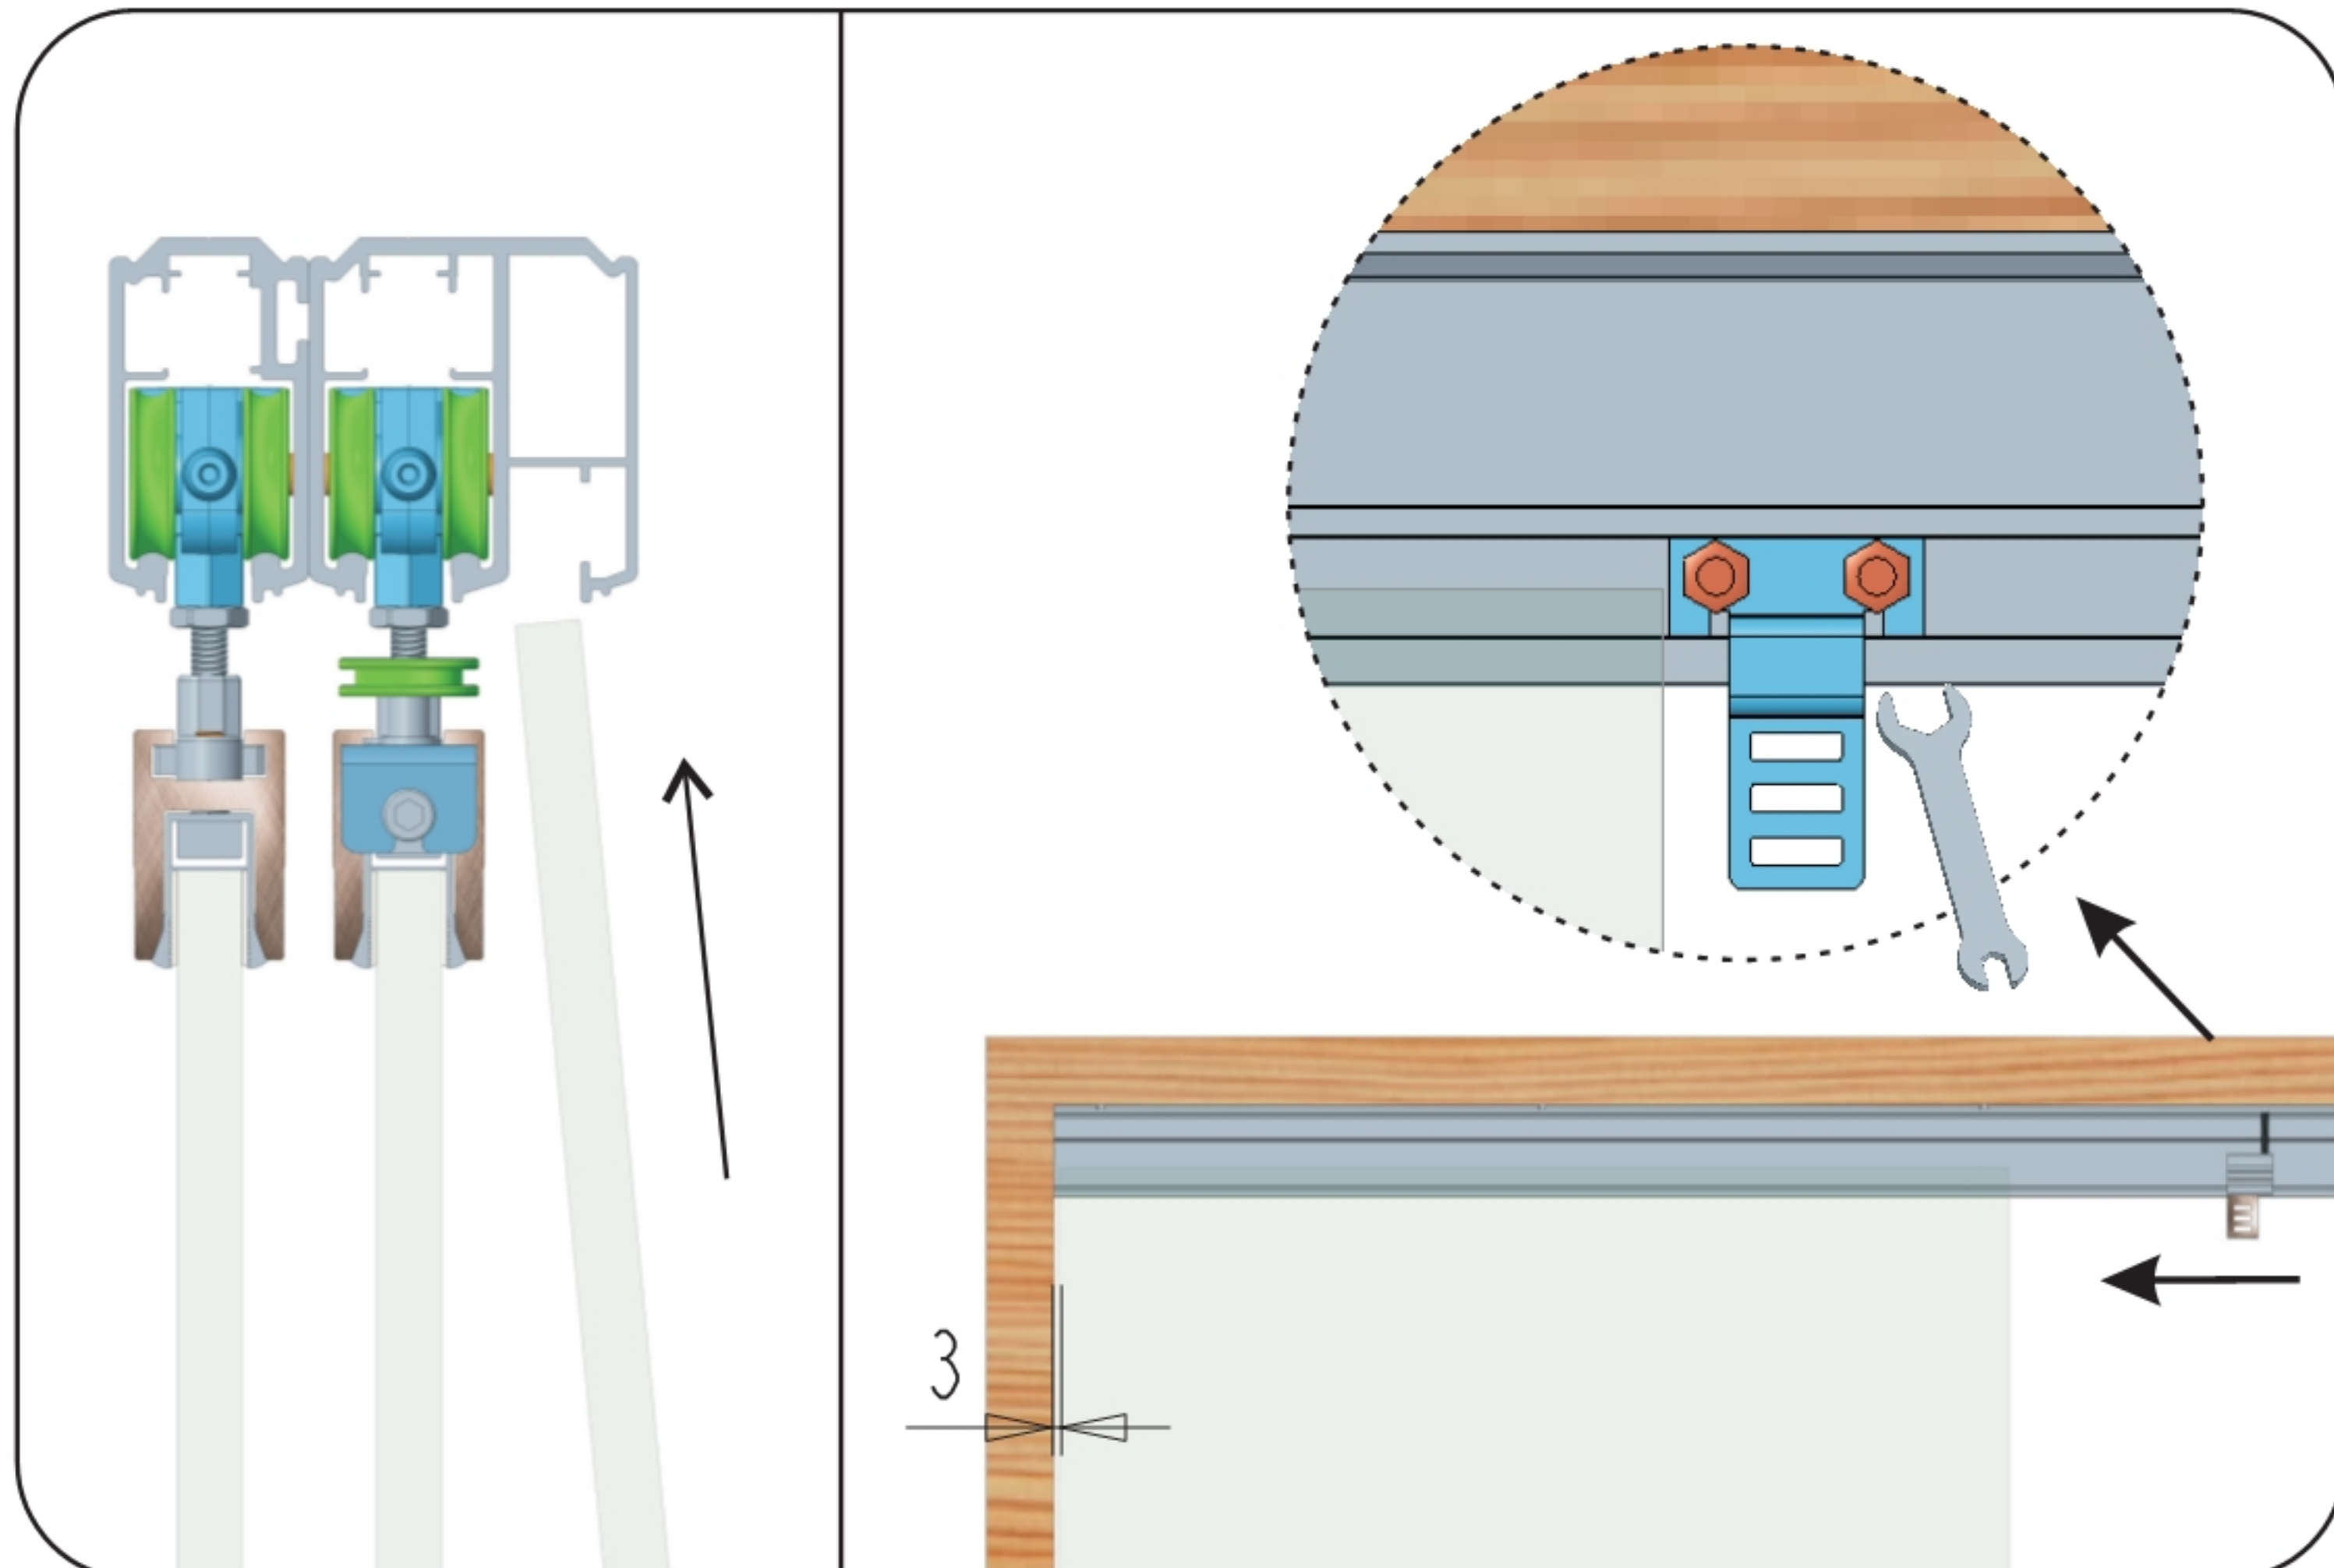


9.Install the stopper according to the location of the second glass

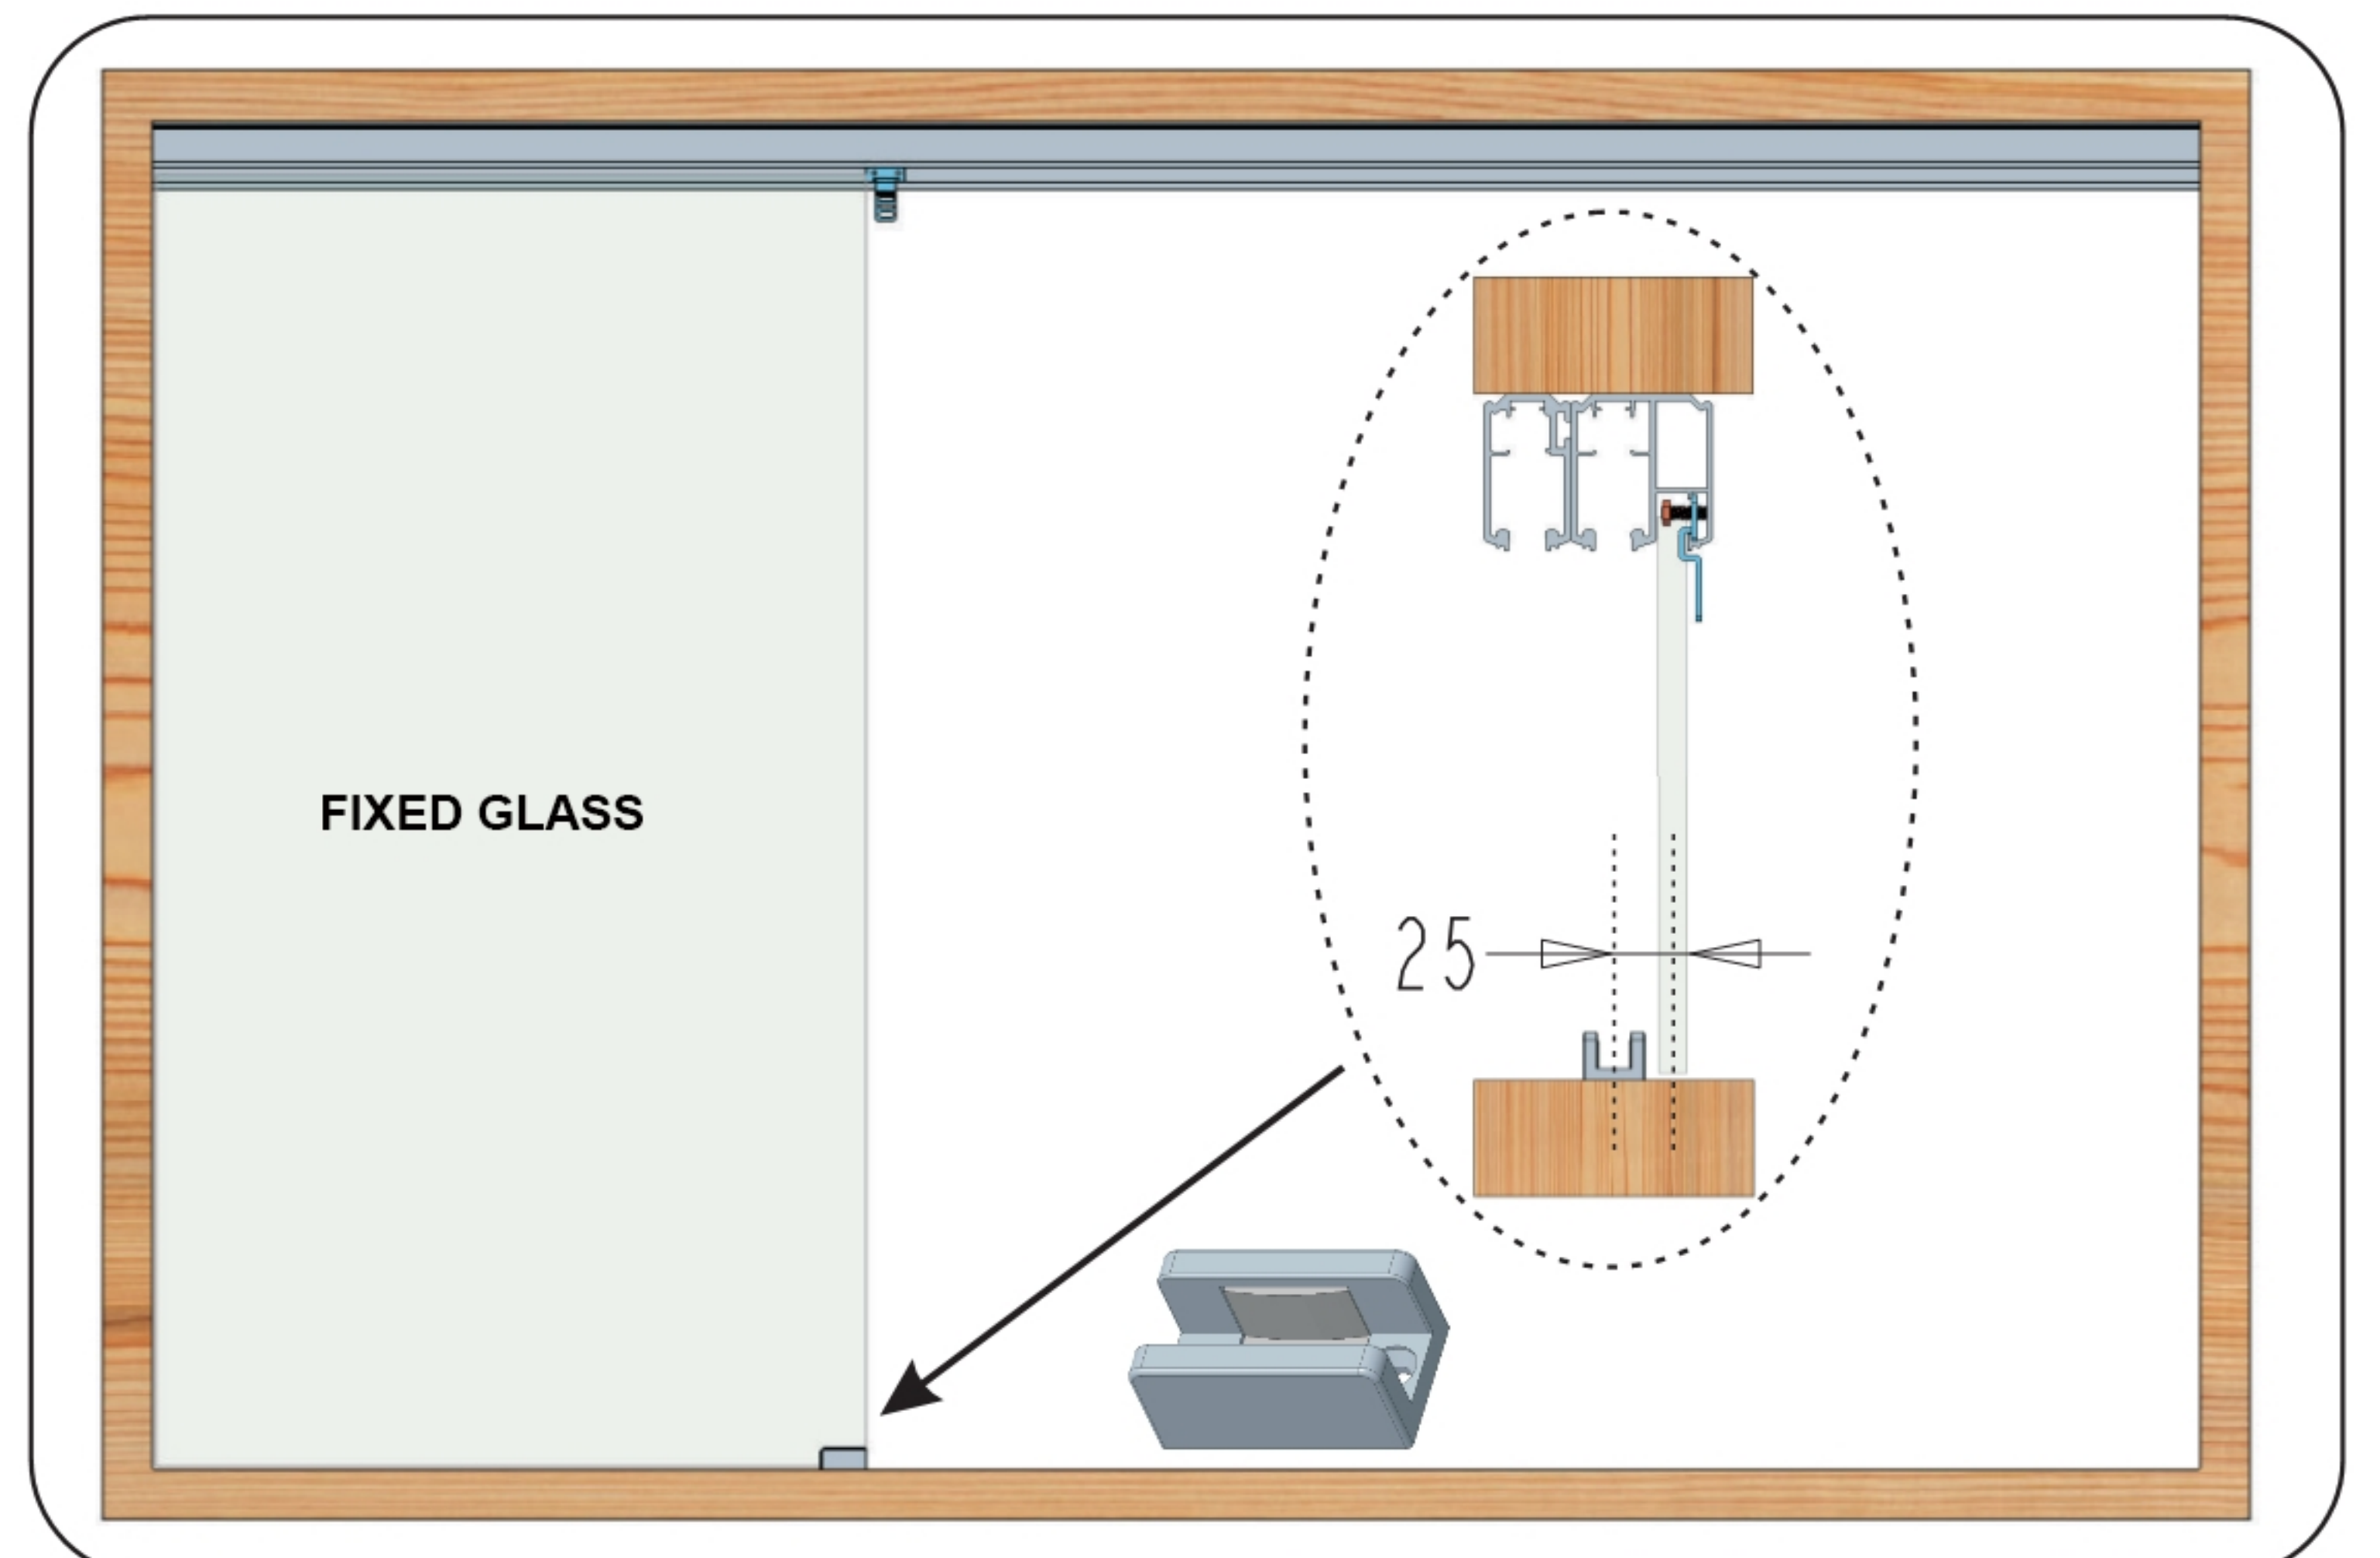


10.Adjust the position of the buffer and stopper of the first glass and fix them so that they are aligned with the fixed glass.

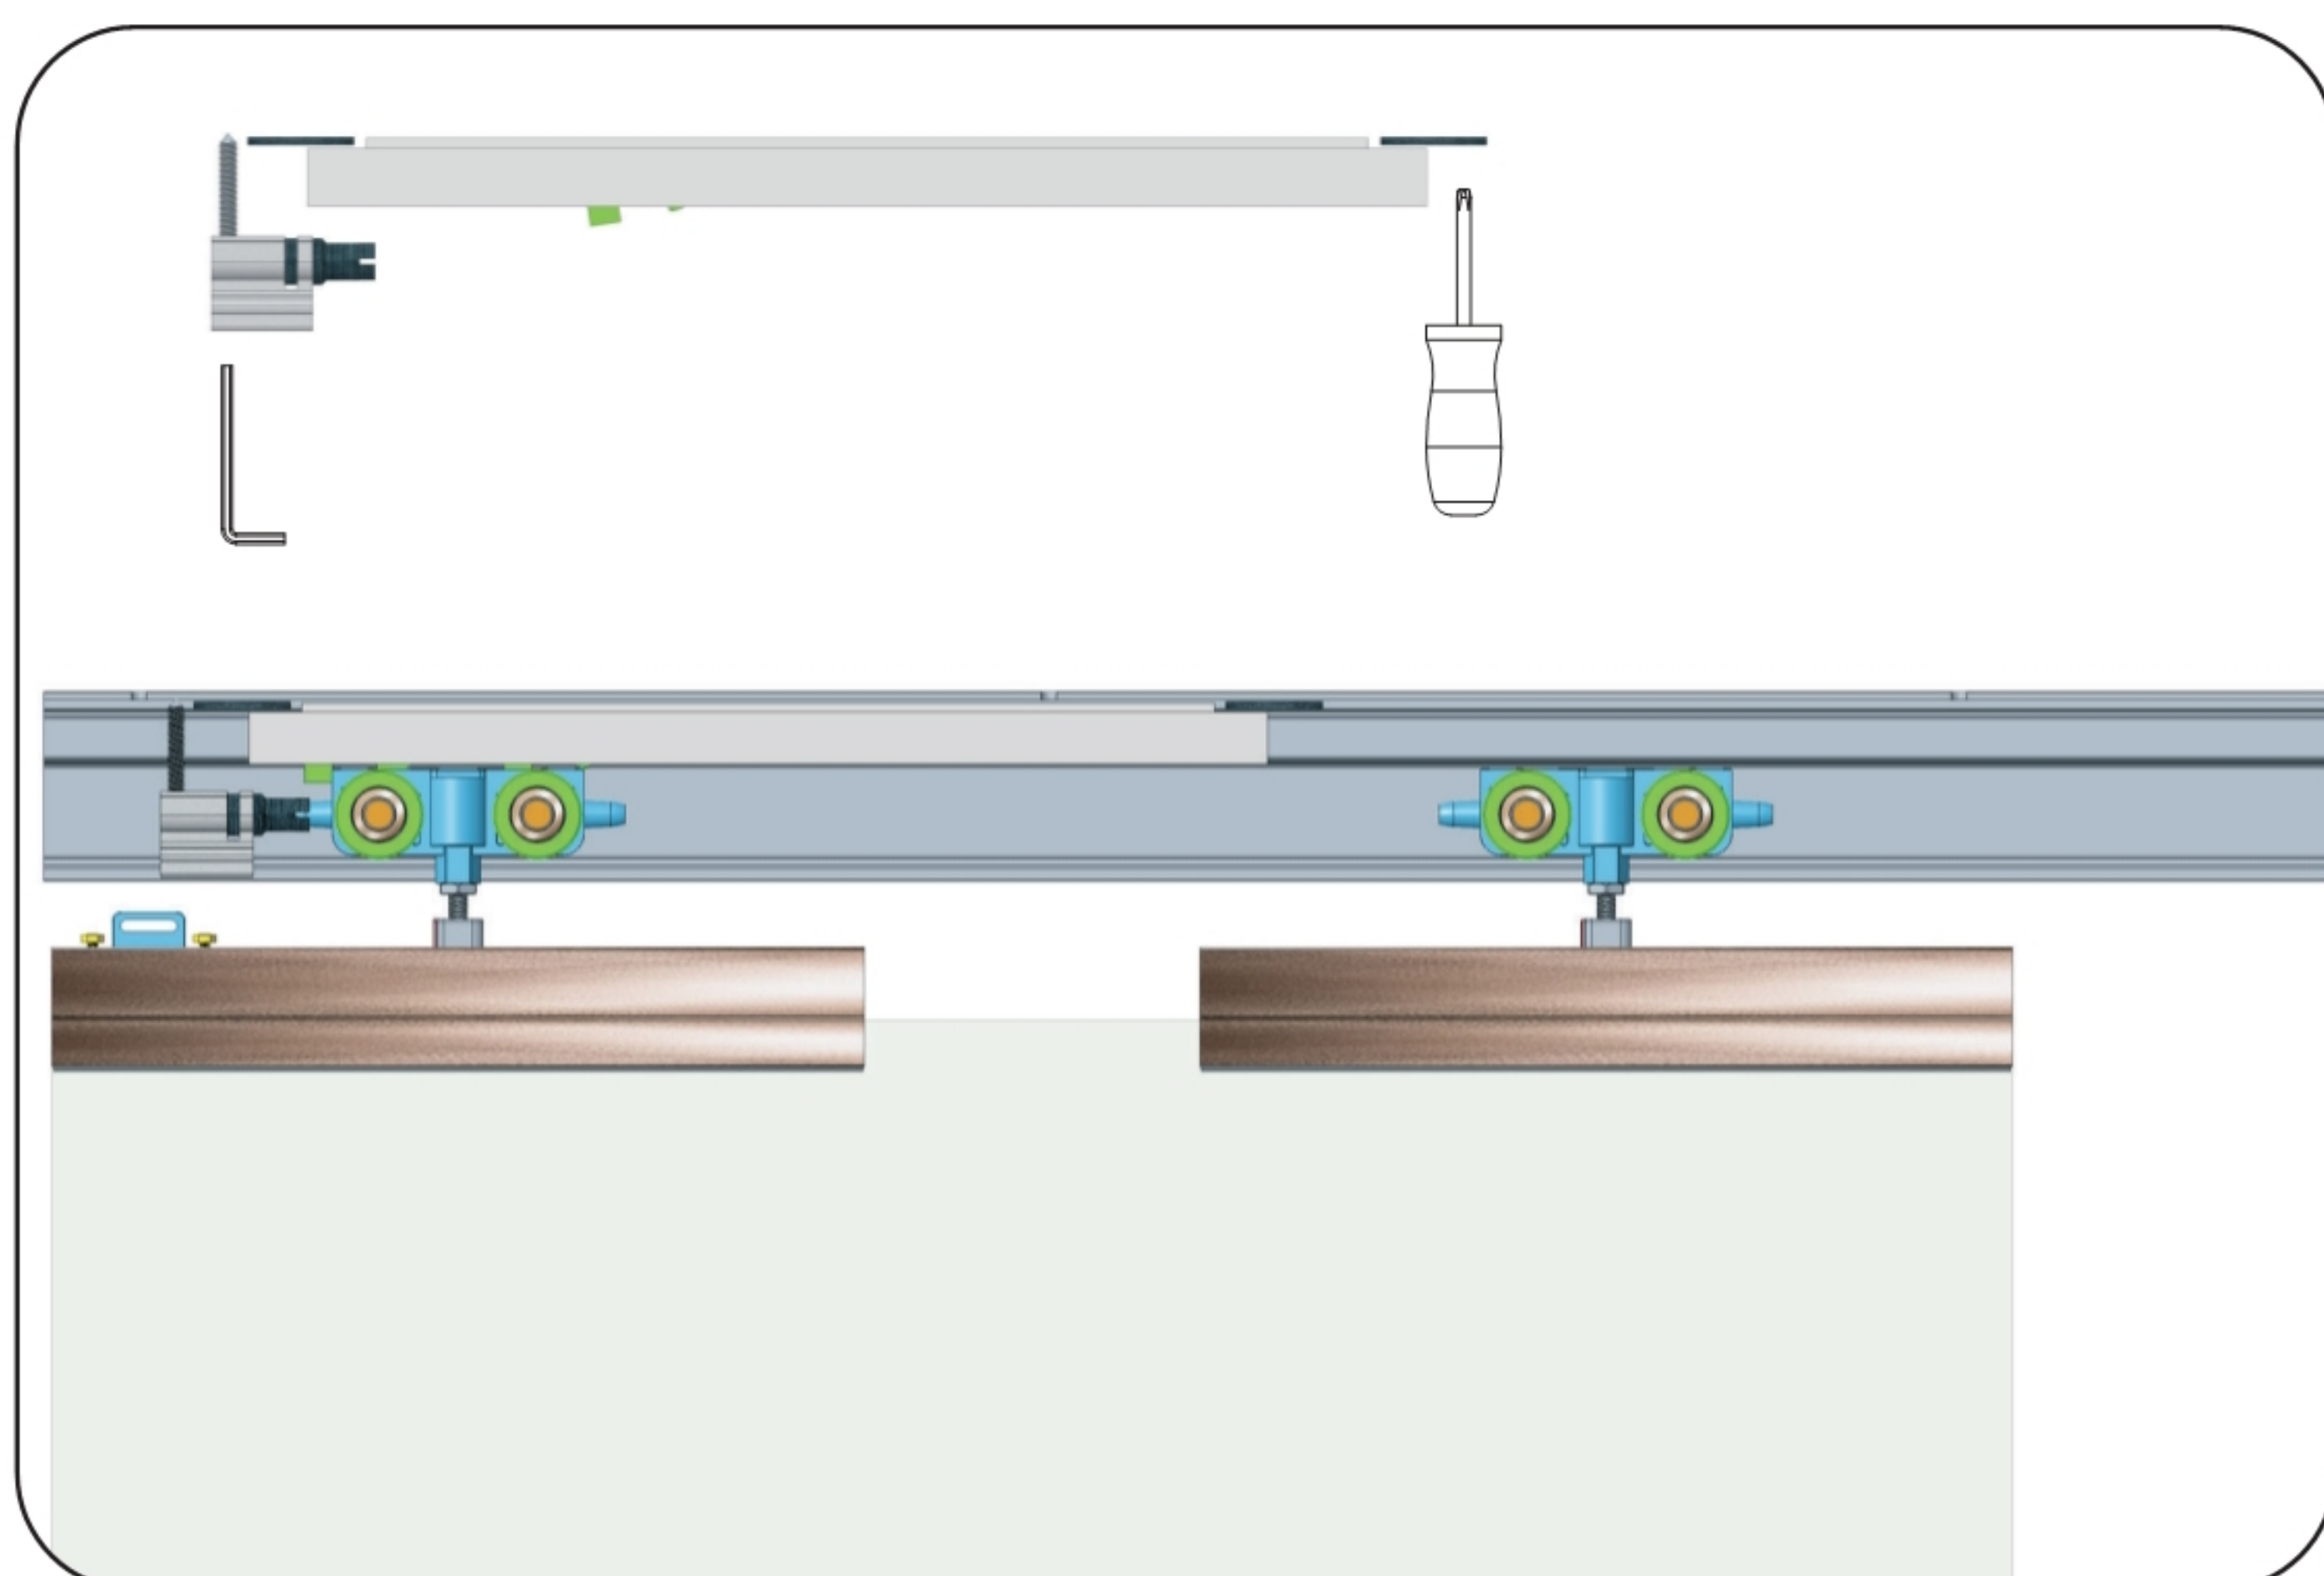


11.three doors together, and secure the double-hole and single-hole wire lugs.

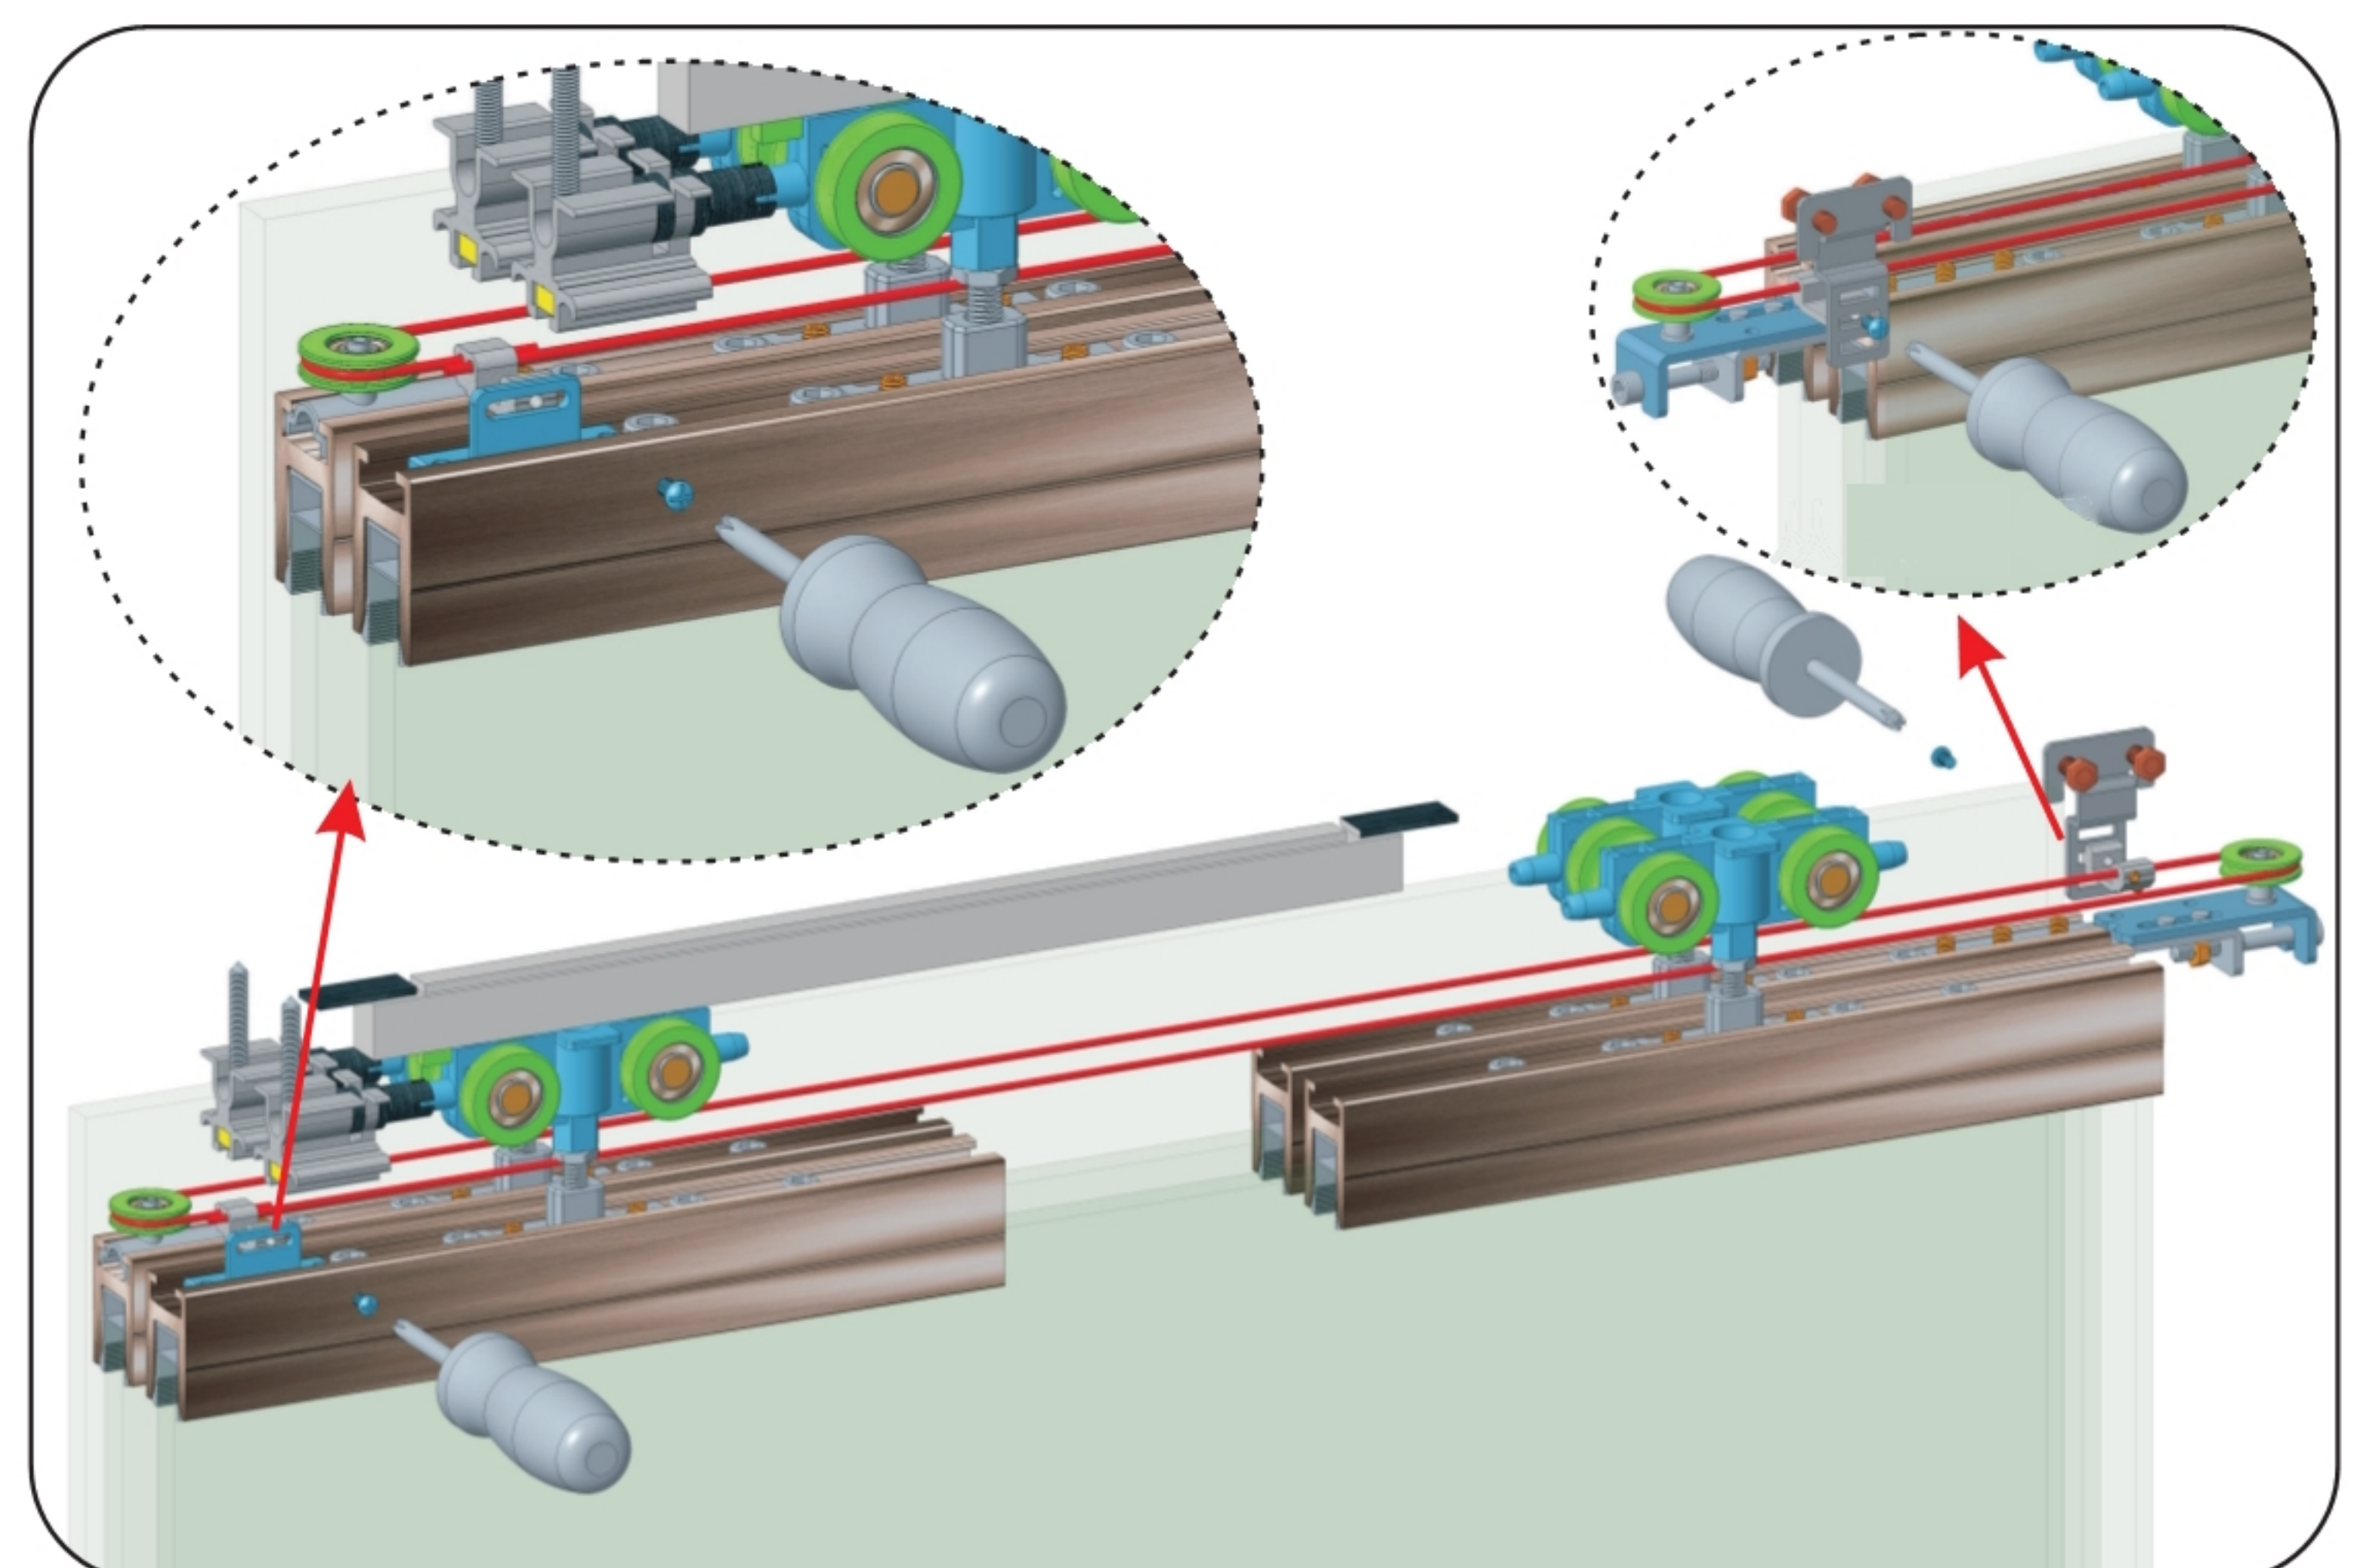


12.Slightly tighten the steel wire rope.

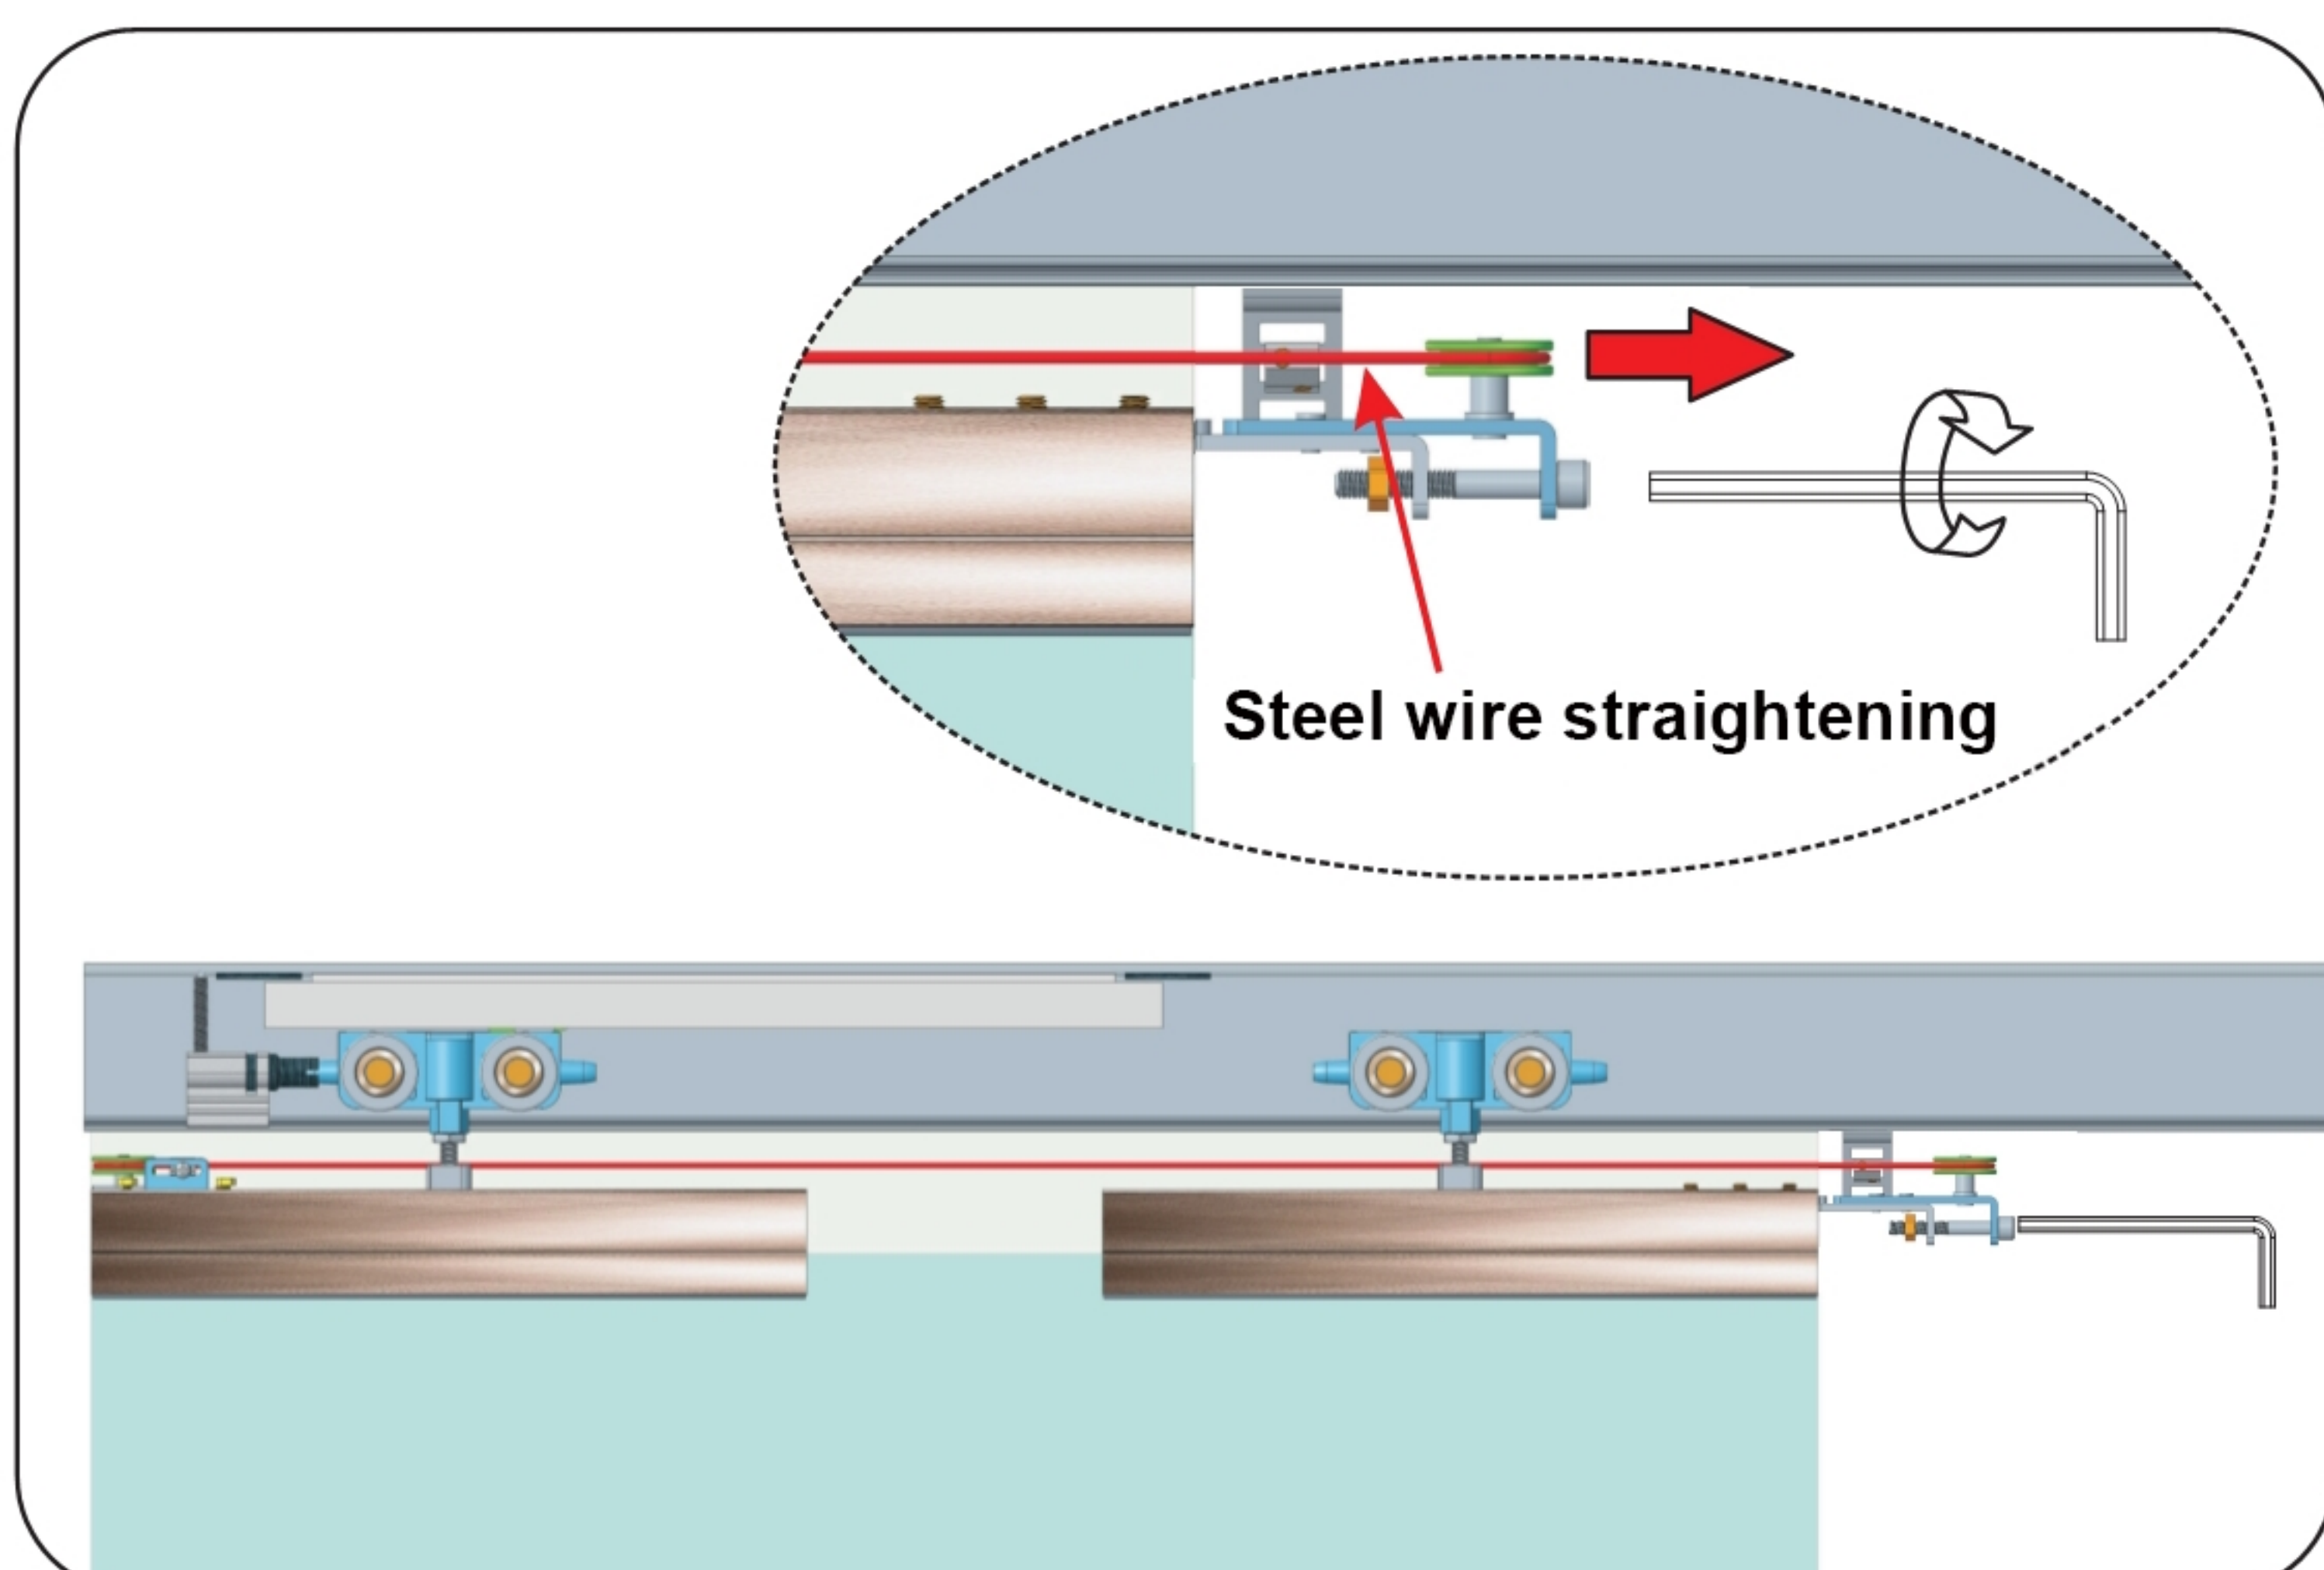


13.After tightening the wire, tight the set screw of the single-hole wire lug steel wire (the three glasses must be aligned before tightening), so that the two doors are connected

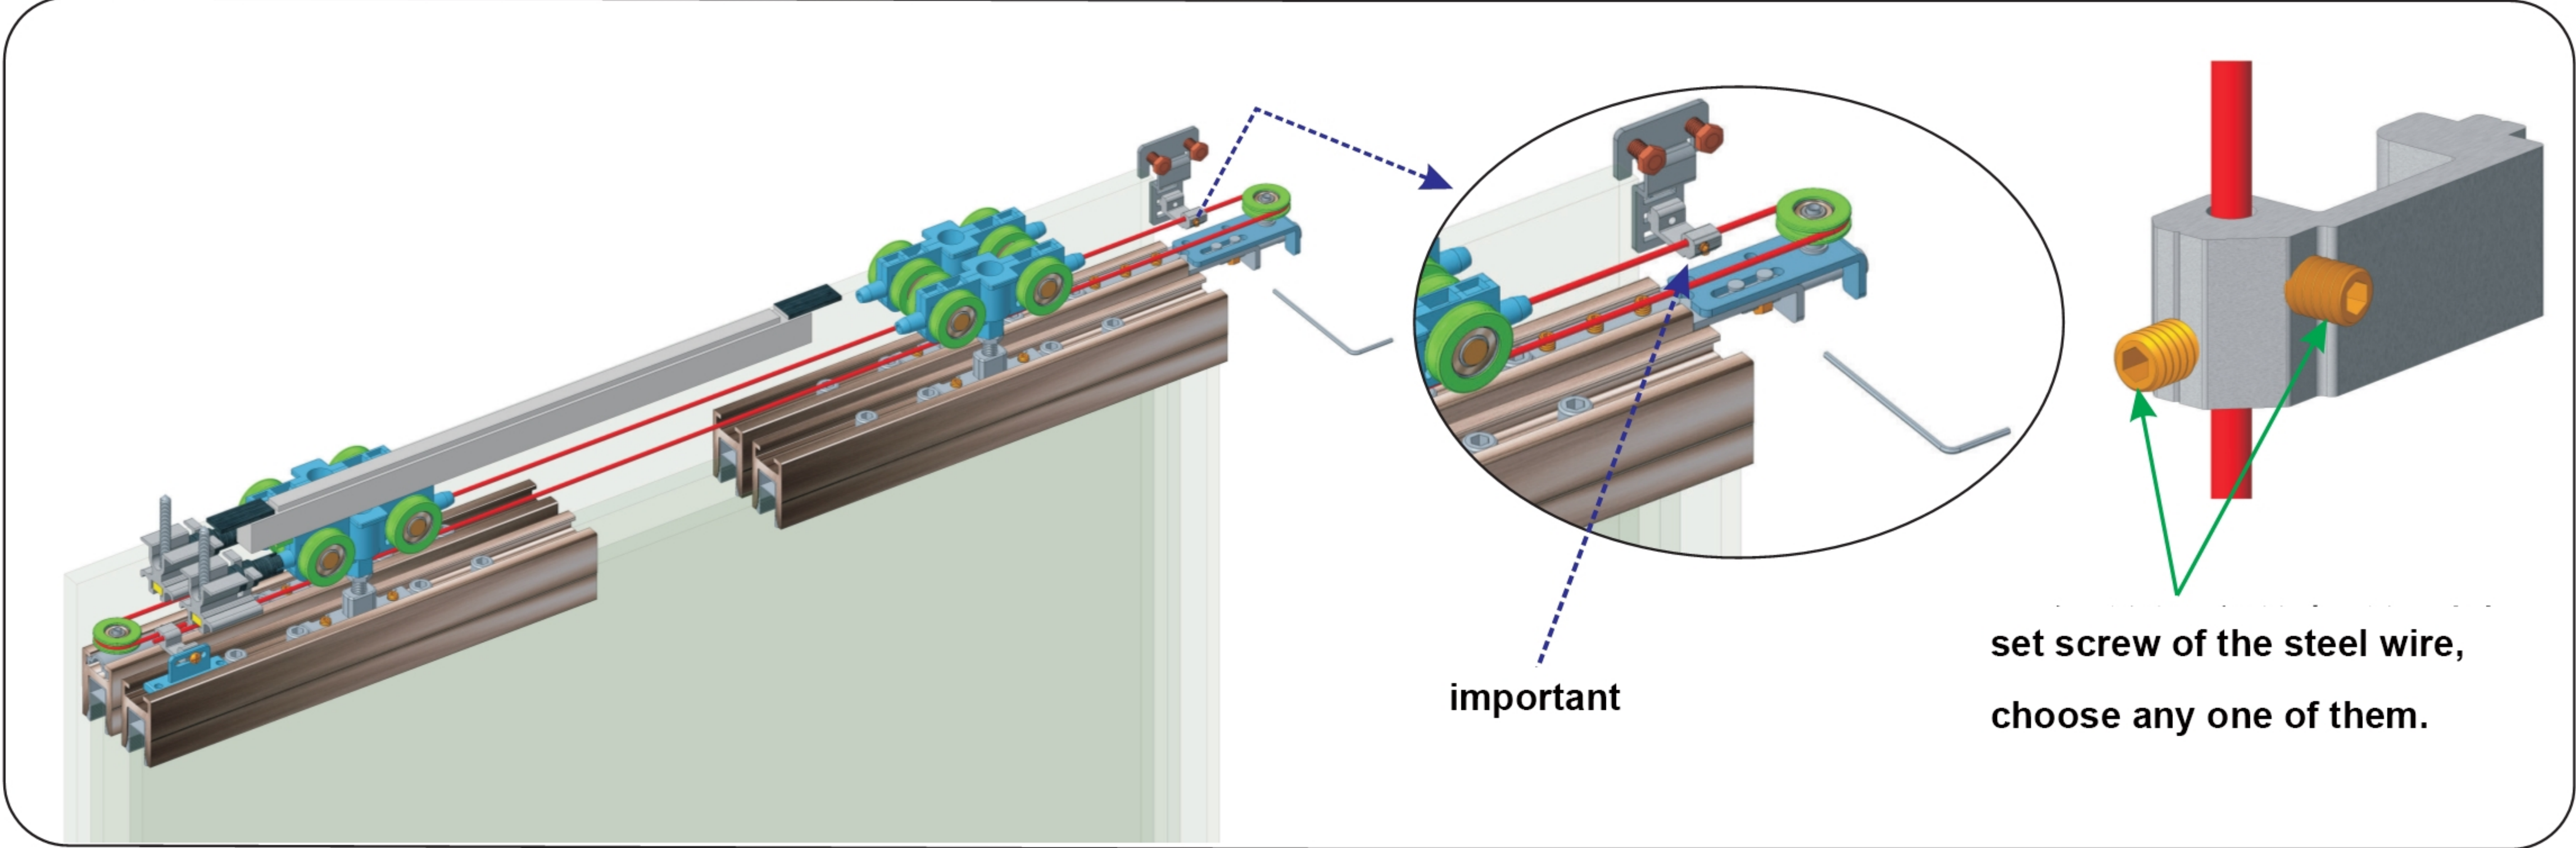


14.Install the movable stopper

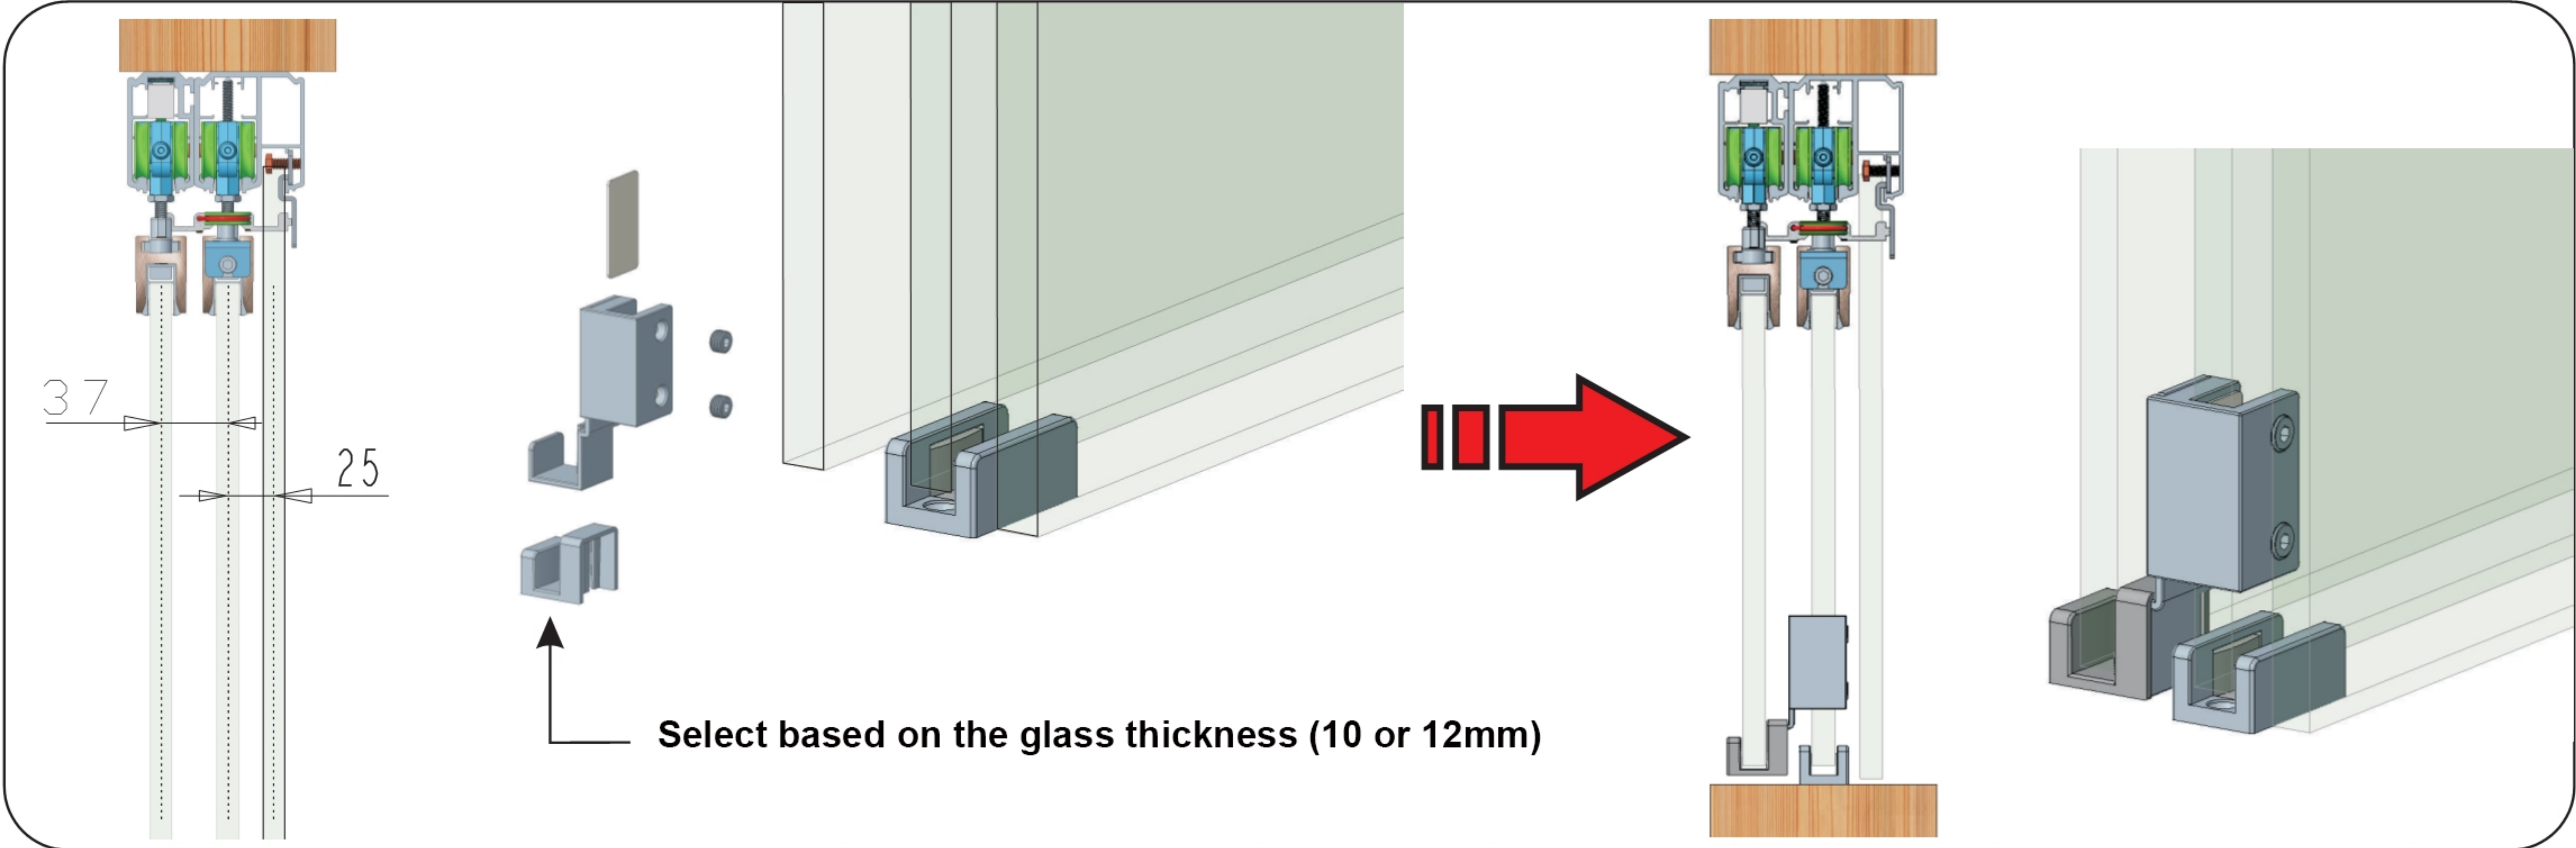

15.When the height of the glass is place suitable, completely tight the anti-hop nuts of each wheel

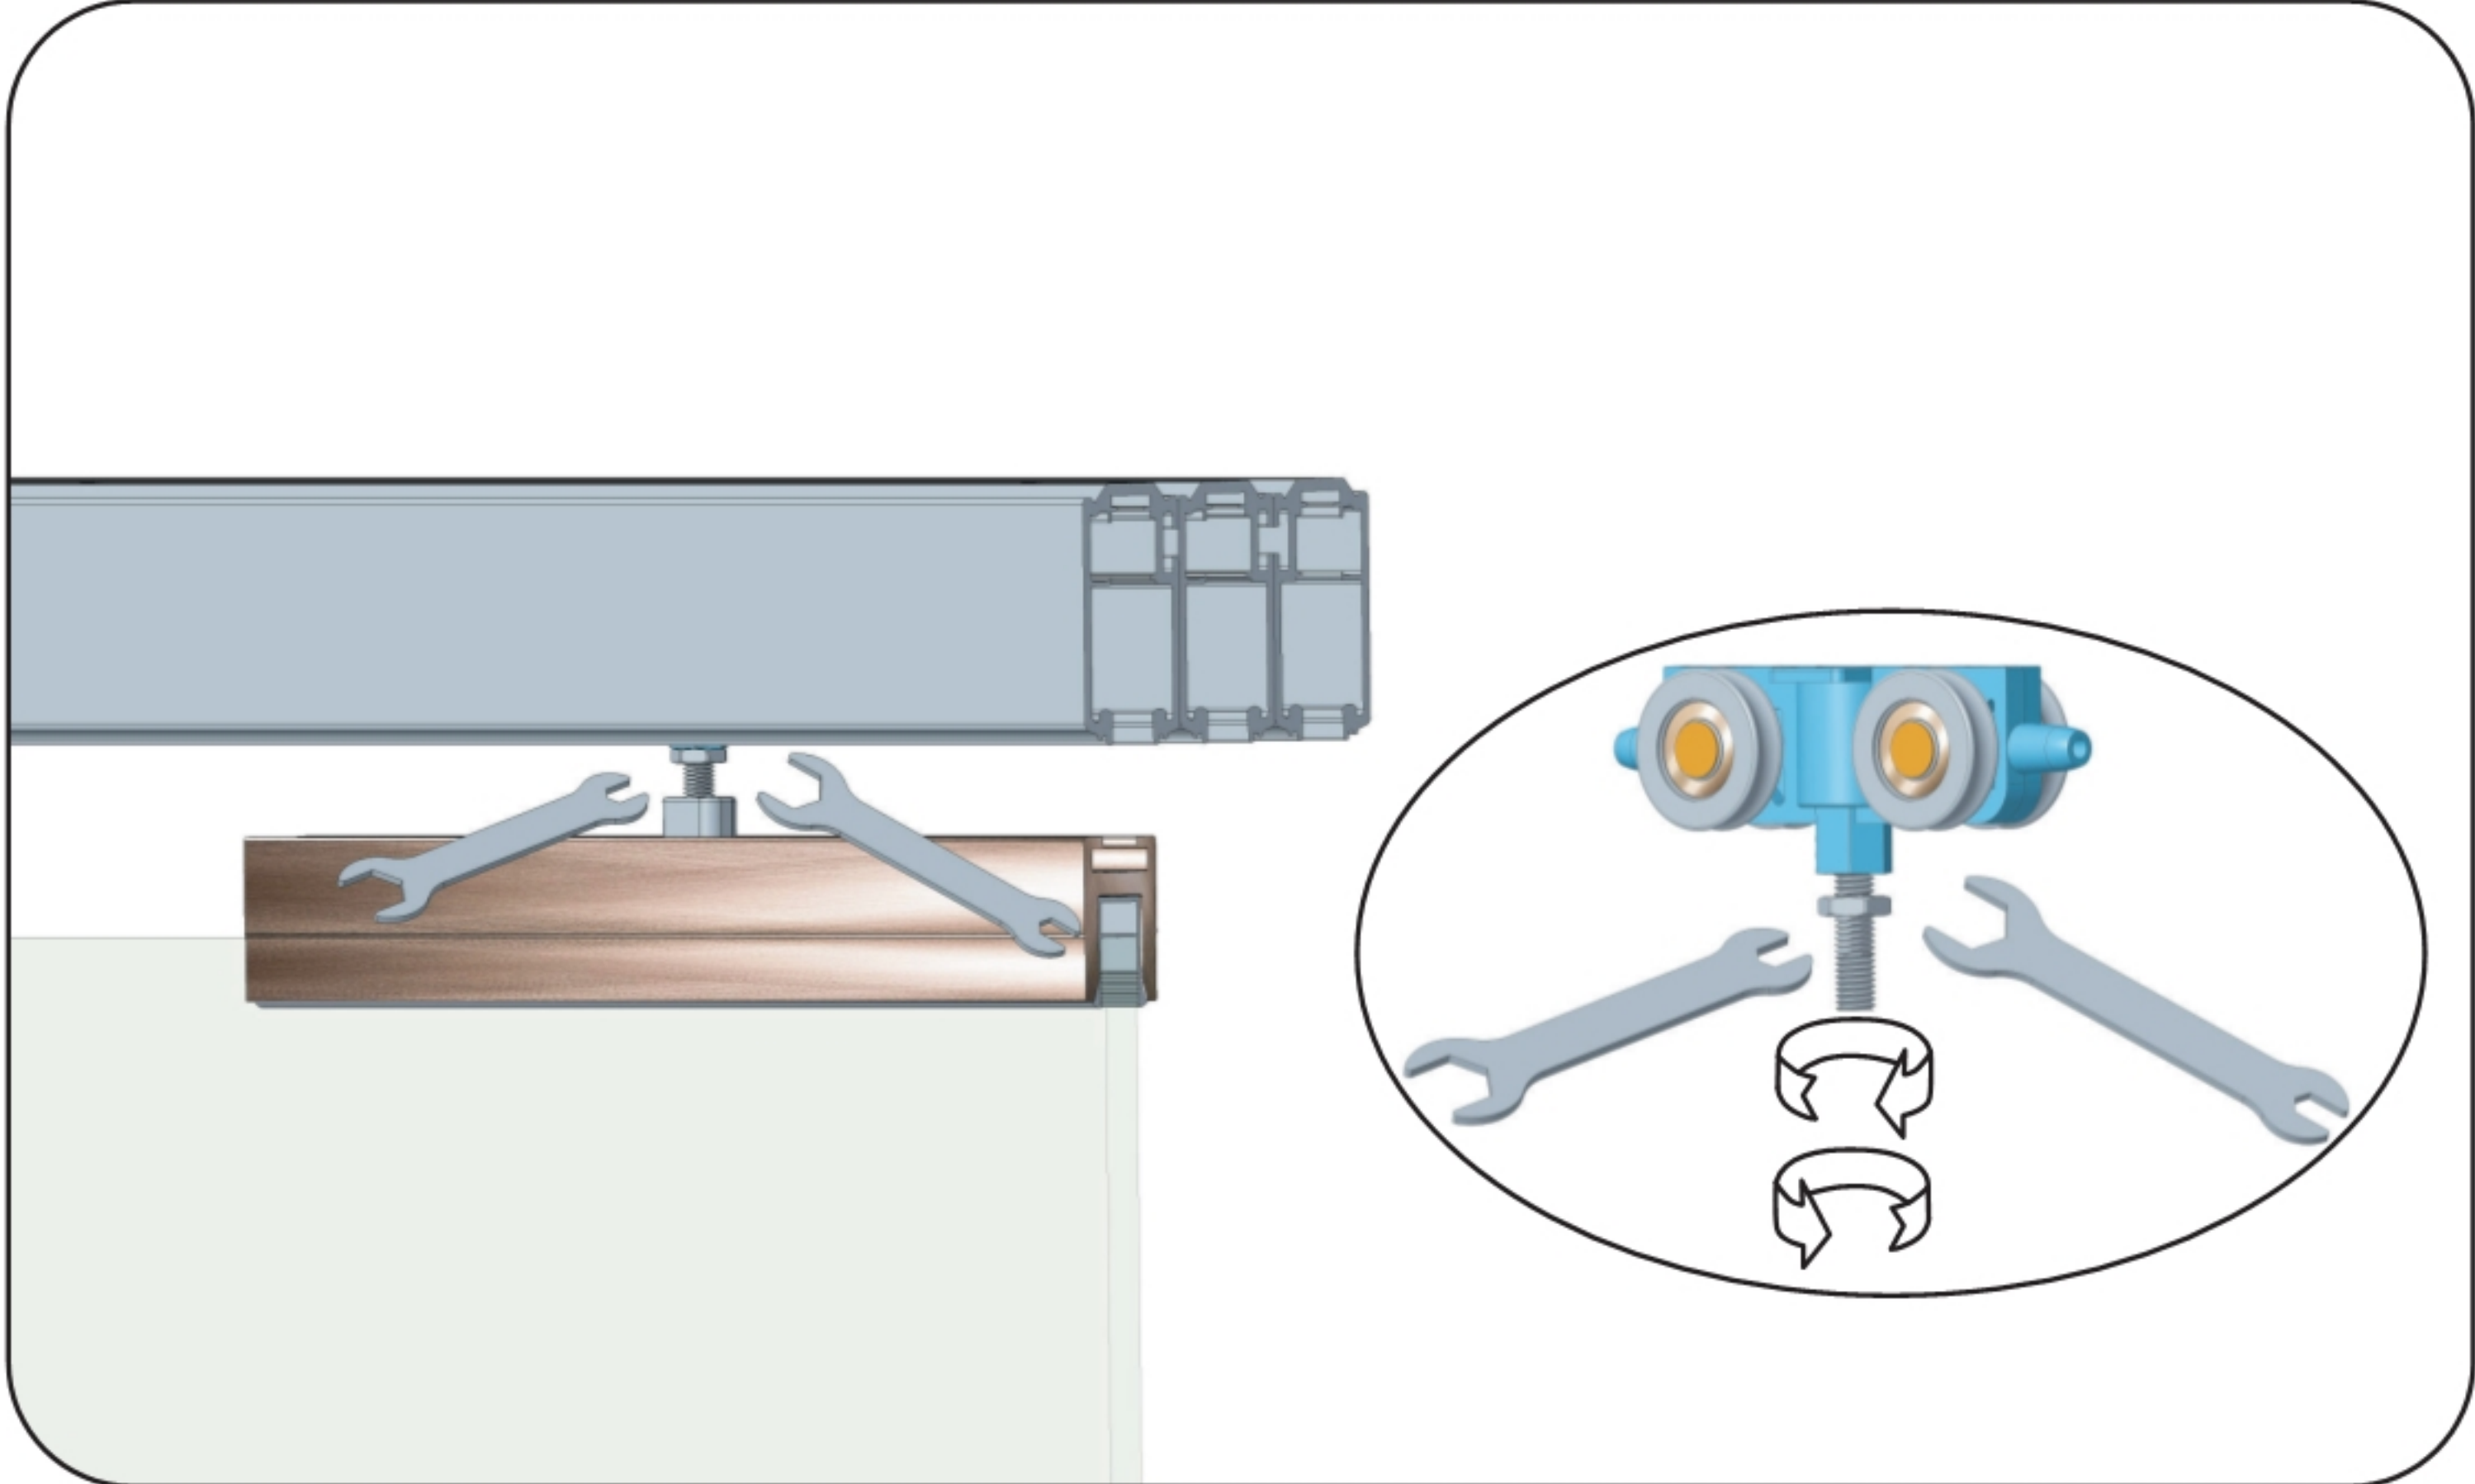

16.Completely tight the adjustable screws of the wire puller and put on the decorative cover

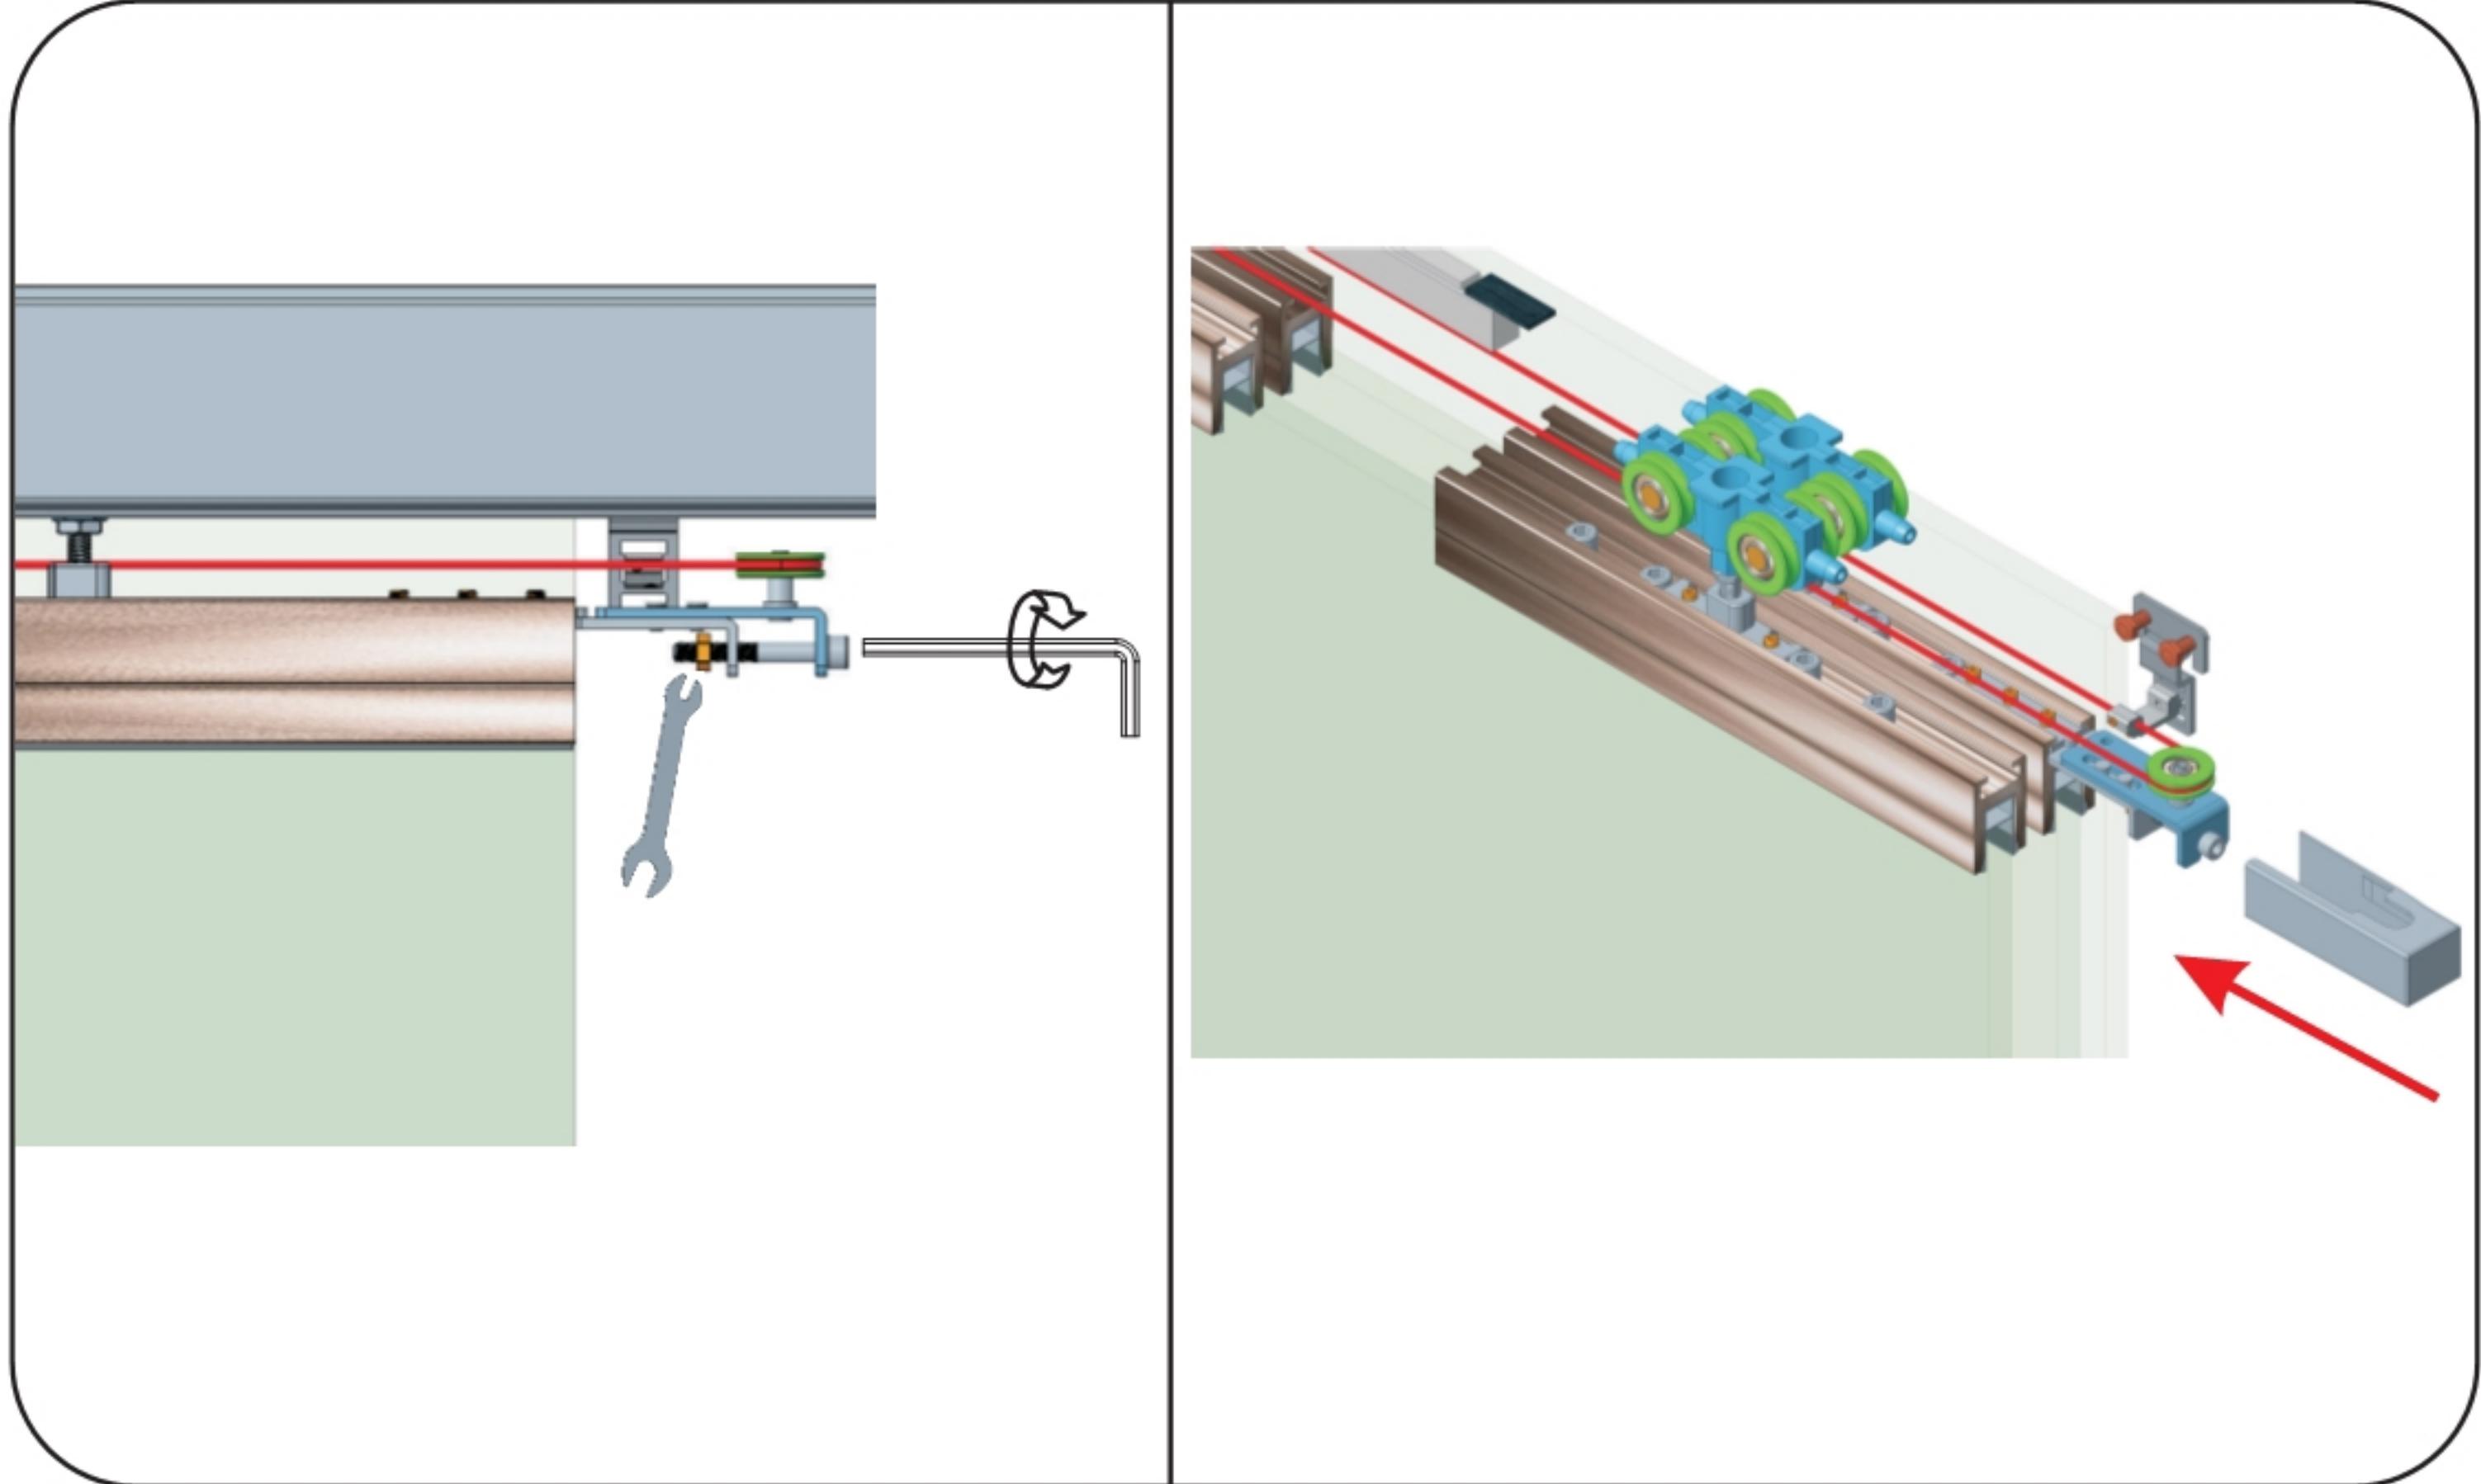

17.Stick the fixed glass with glue, and cover the rail panel. Done.

